 
 


Wall Light Installation

Tools Required:

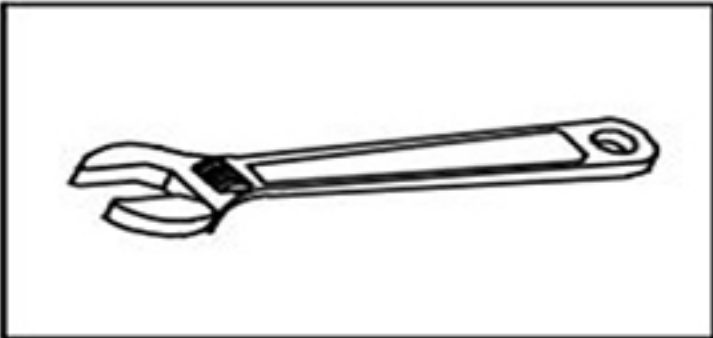

Adjustable Wrench

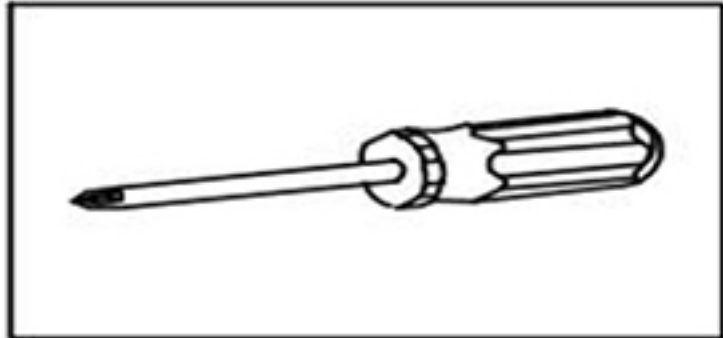 


Phillips Screwdriver

Before Installation


1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
6. Do not use bulbs with wattage greater than specified on this fixture.

Parts List

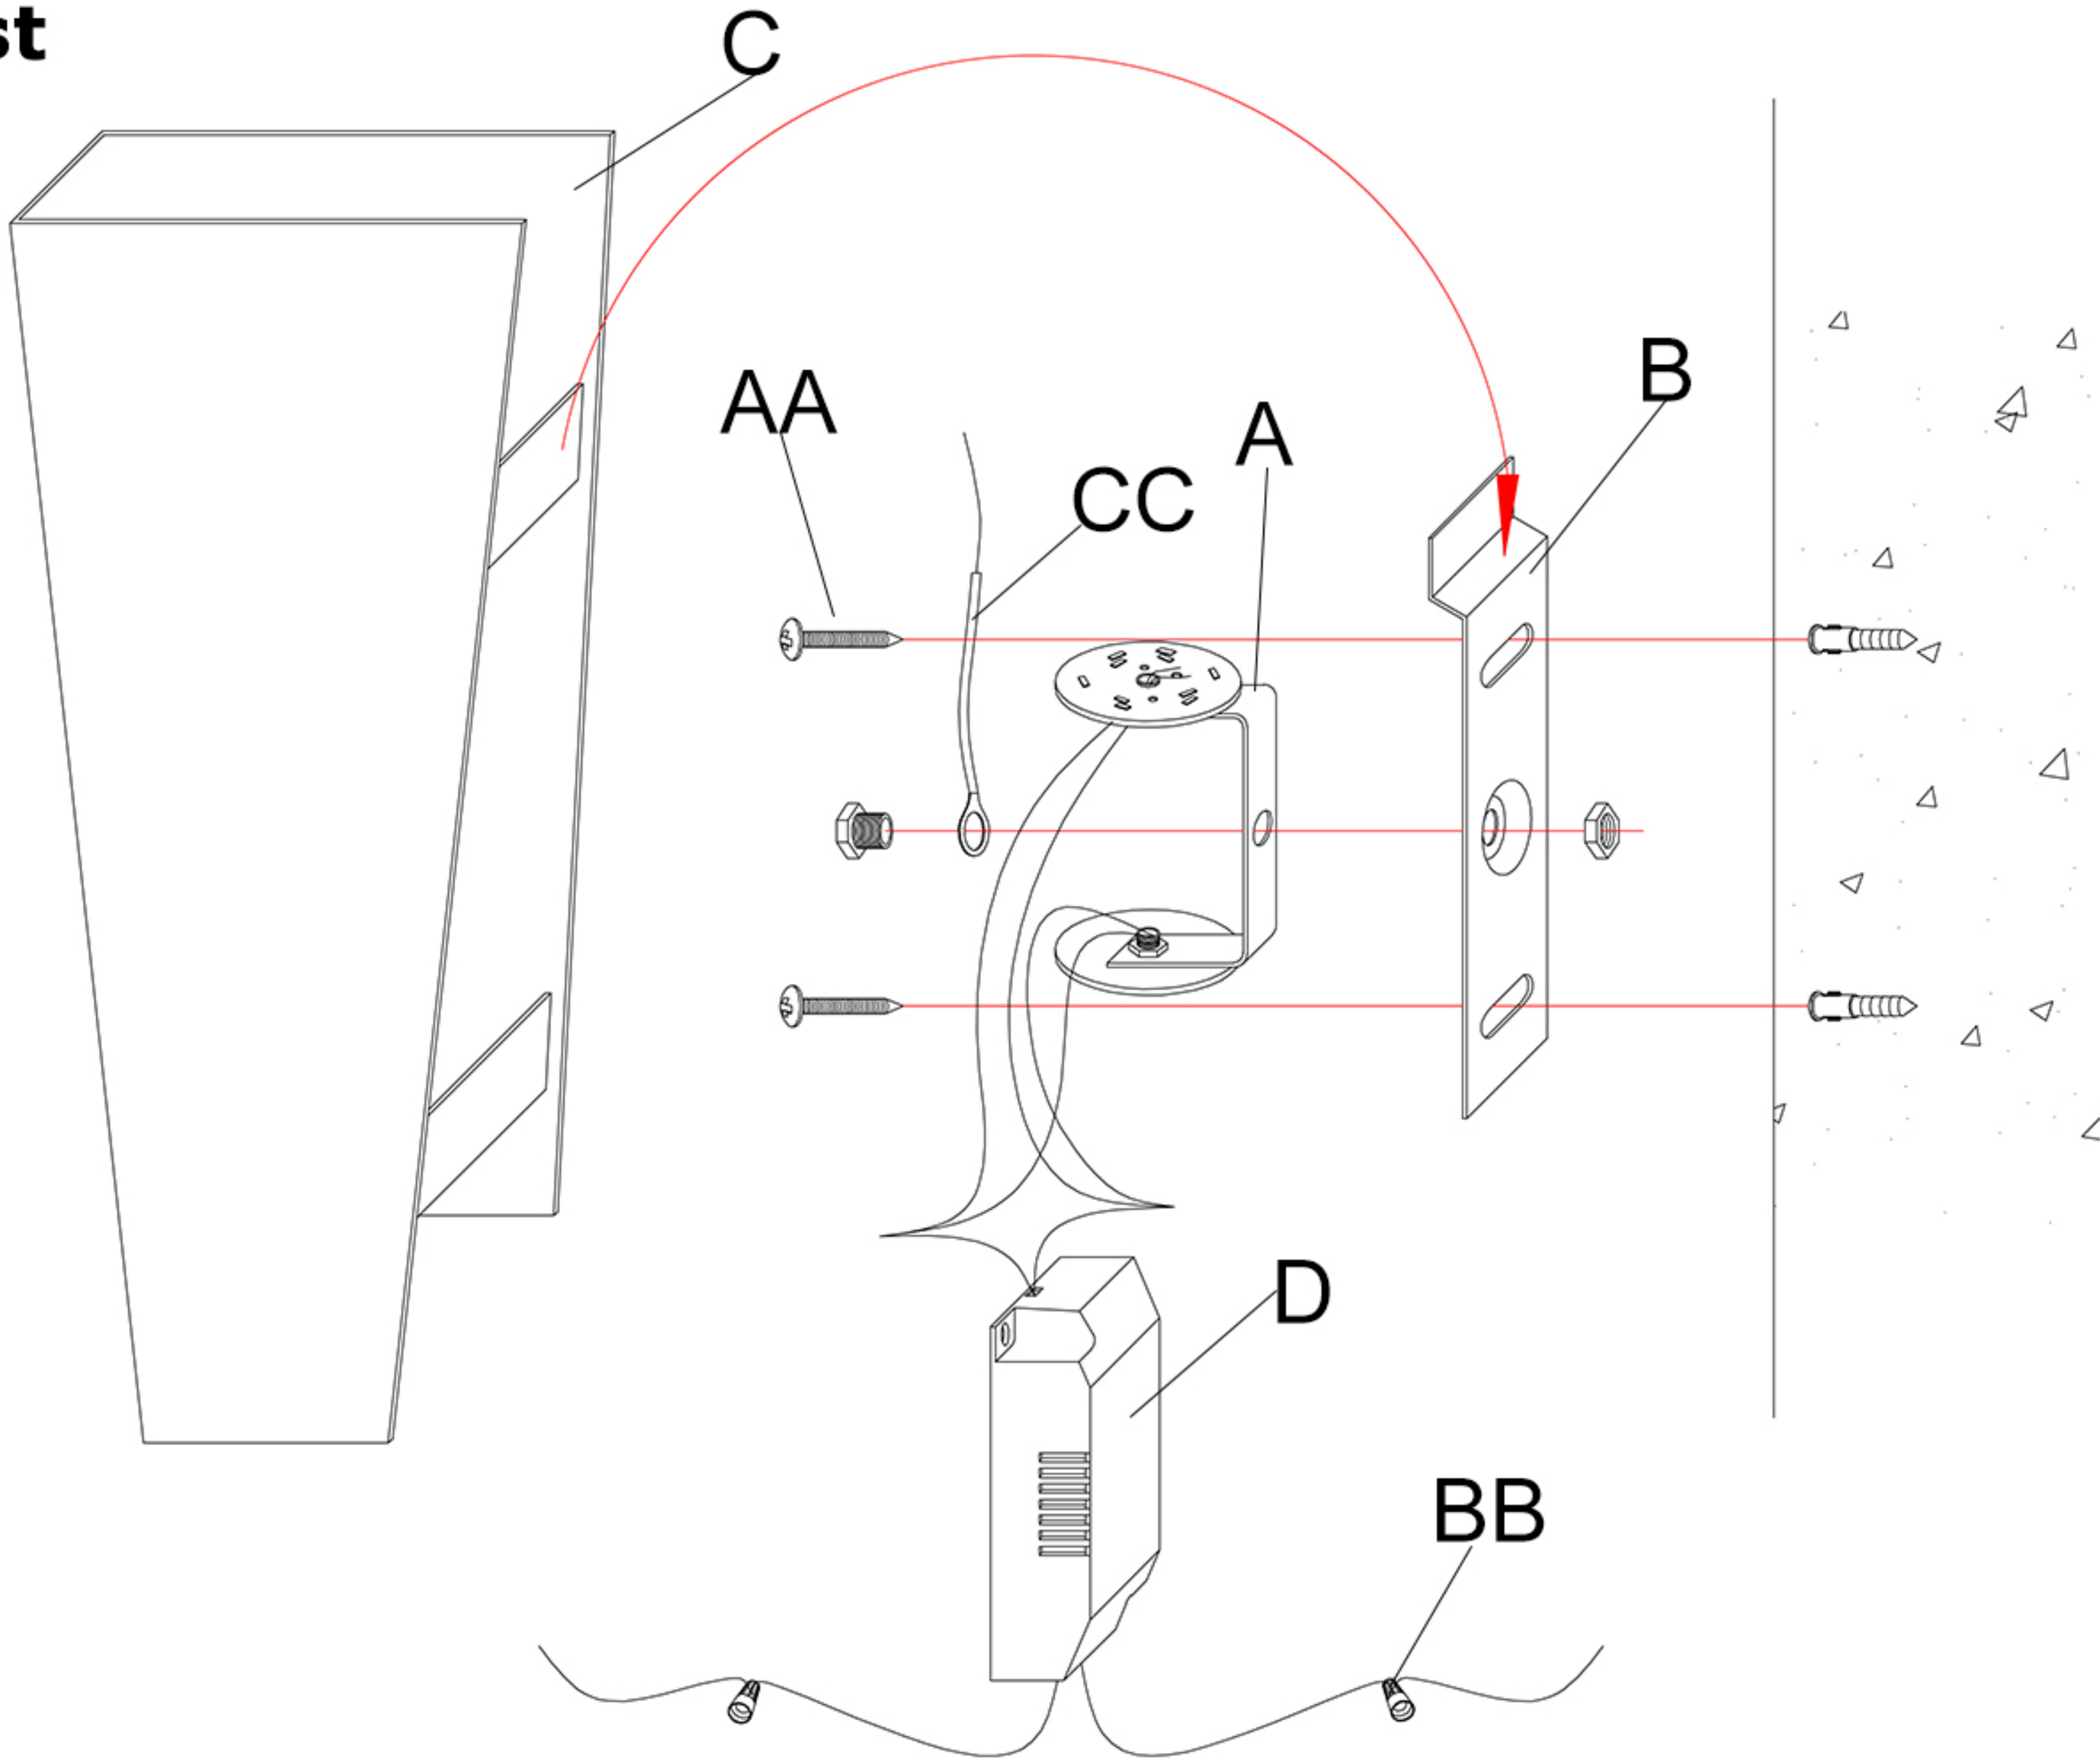

| Part | Name | Quantity |
|------|----------------|----------|
| A | metal plate | 1 |
| B | mounting strap | 1 |
| C | light shade | 1 |
| D | LED driver | 1 |
| AA | screw | 2 |
| BB | wire connector | 2 |
| CC | ground wire | 1 |

 Installation Guide

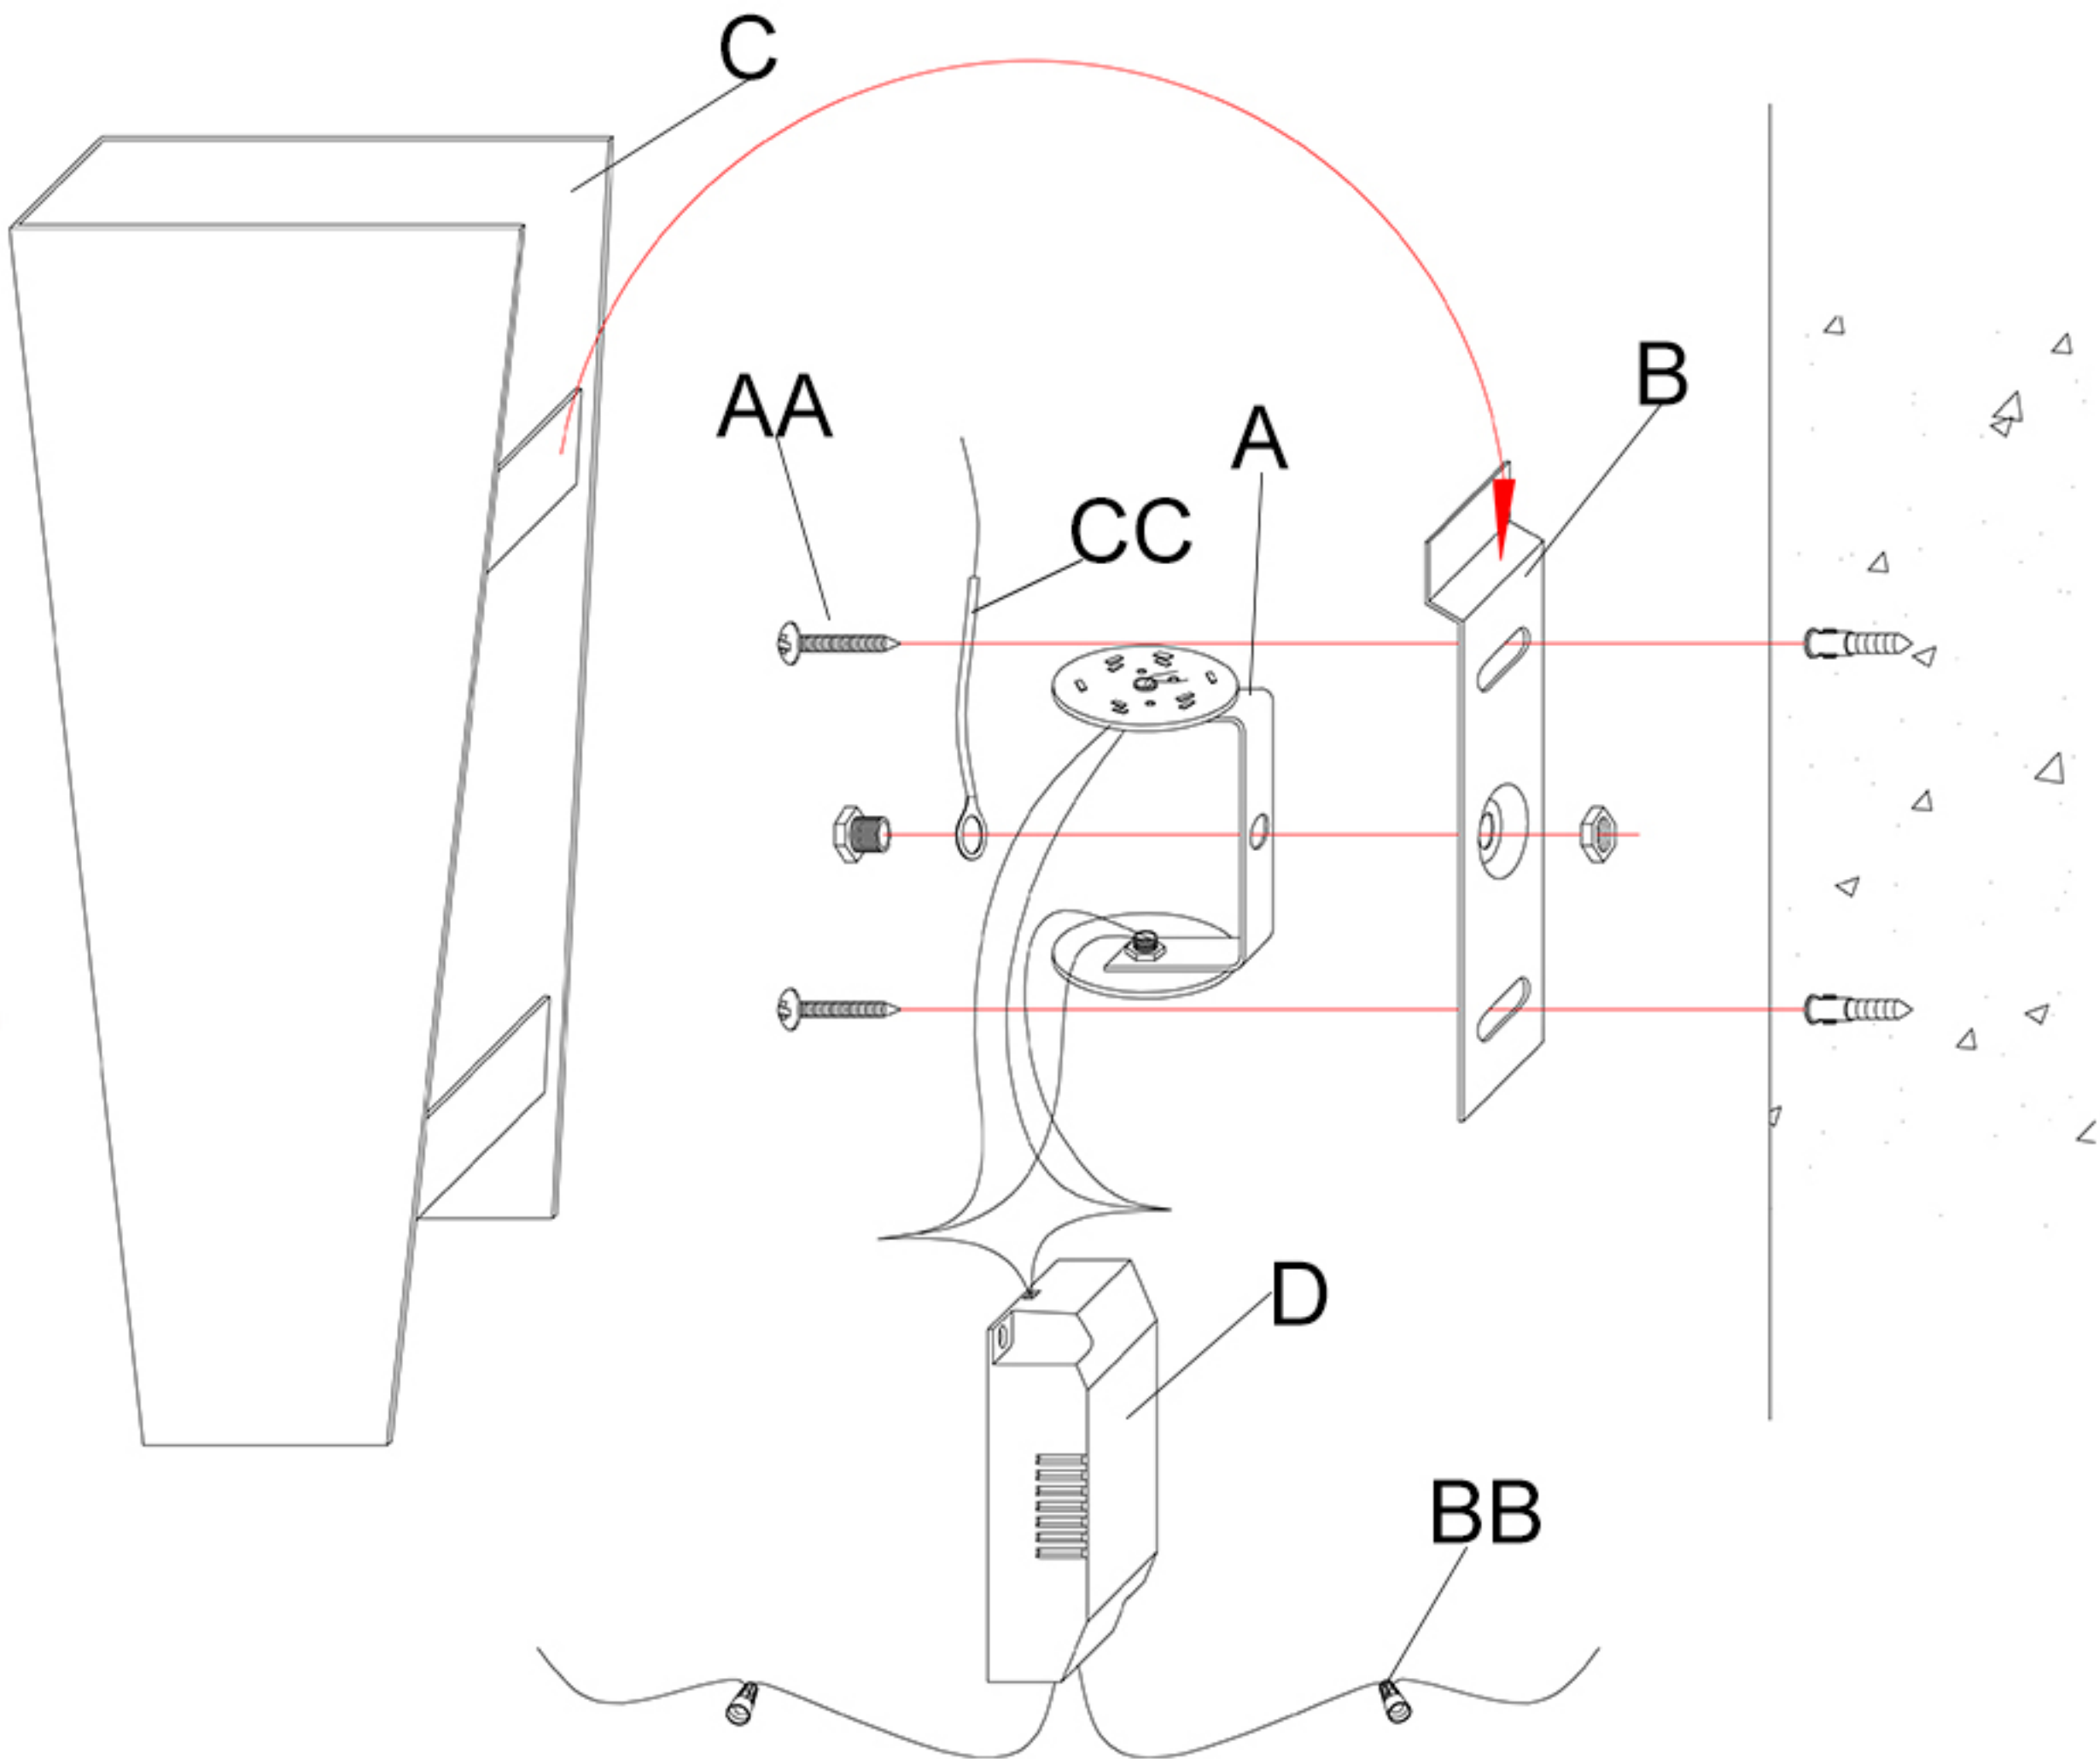

1. Shut off the power before installation.
2. Attach the metal plate (A) to the mounting strap (B) and fix with nuts.
3. Fix the mounting strap (B) to wall with screws (AA).
4. Connect the wires with wire connectors (BB) to the corresponding wires in wall.
5. Install and lock the light shade (C) in place. Turn on the power and test.

Troubleshooting

| Problem | Possible Cause | Corrective Action |
|-------------------------|----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
| Fixture does not light. | 1. Fixture may be wired incorrectly. 2. Worn or broken bulb. 3. Lamp socket or LED transformer (if applicable) may go bad. | 1. Check wiring. 2. Replace bulb. 3. Replace lamp socket or LED transformer (if applicable). |
| Light bulb flickers. | 1. Swith Contacts are bad. 2. Wire connections are loose. 3. Light bulb socket may go bad. | 1. Replace the switch. 2. Check wire connections. 3. Replace the socket. |