

# **Light Fixture Installation**

### **Tools Required:**

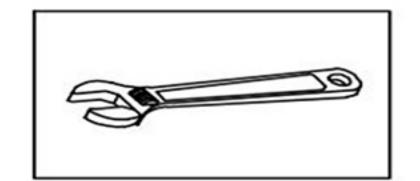

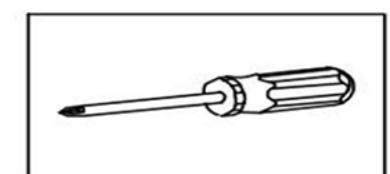


Adjustabie Wrench

Philips Screwdriver

#### **Before Installation**


- 1. Please read these instructions before assembling or installing the product. **NOTE**: Installation by a licensed electrian is recommended.
- 2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
- 3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
- 4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 5. **IMPORTANT**: Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
- 6. Do not use bulbs with wattage greater than specified on this fixture.

#### **Parts List**

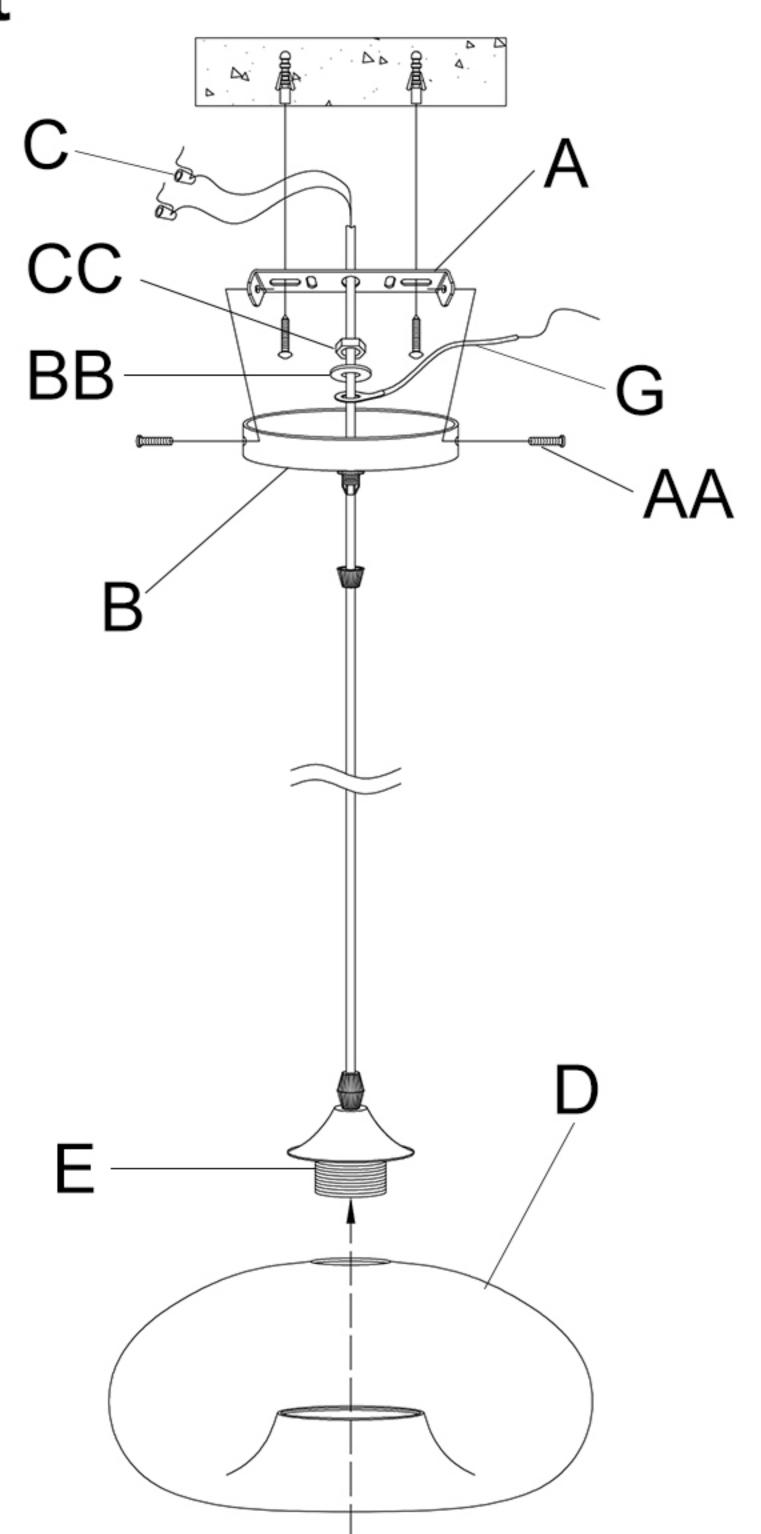

<u> </u>		
Part	Name	Quantity
Α	mounting strap	1
В	canopy	1
С	wire connectors	2
D	light shade	1
E	lamp holder	1
F	socket ring	1
G	ground wire	1
AA	screw	4
BB	washer	1
CC	nut	2

#### **Installation Guide**

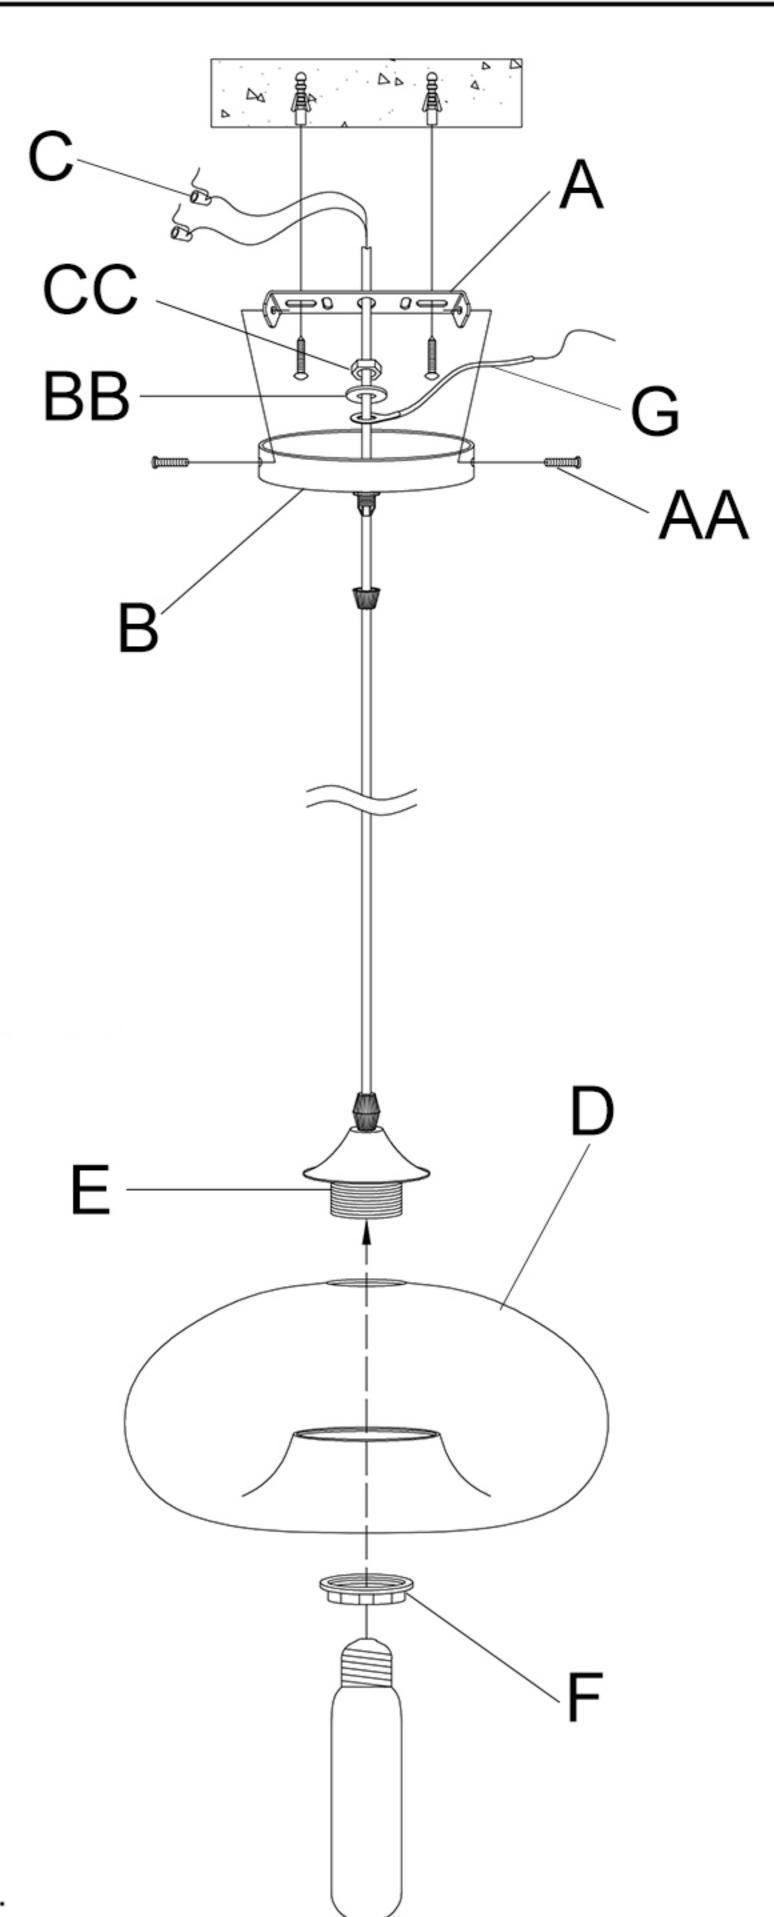

- 1. Shut off power before installation.
- 2. Fix the mounting strap (A) to ceiling.
- 3. Remove the nut (CC) and washer (BB) from the threaded rod pre-installed on the canopy (B),put on the ground wire (G), and finally screw back the washer (BB) and nut (CC).
- 3. Connect wires with wire connectors (C) to the corresponding wires in ceiling.
- 4. Attach the canopy (B) to the mounting strap (A) and fix with screws (AA).
- 5. Fix the light shade (D) to the lamp holder (E) with socket ring (F).
- 6. Install the light bulb and turn on the power.

## Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	<ol> <li>Fixture may be wired incorrectly.</li> <li>Worn or broken bulb.</li> <li>Lamp socket or LED transformer (if applicable) may go bad.</li> </ol>	<ol> <li>Check wiring.</li> <li>Replace bulb.</li> <li>Replace lamp socket or LED transformer (if applicable).</li> </ol>
Light bulb flickers.	<ol> <li>Swith Contacts are bad.</li> <li>Wire connections are loose.</li> <li>Light bulb socket may go bad.</li> </ol>	<ol> <li>Replace the switch.</li> <li>Check wire connections.</li> <li>Replace the socket.</li> </ol>