



# Wall-Mounted Light Installation

## Tools Required:

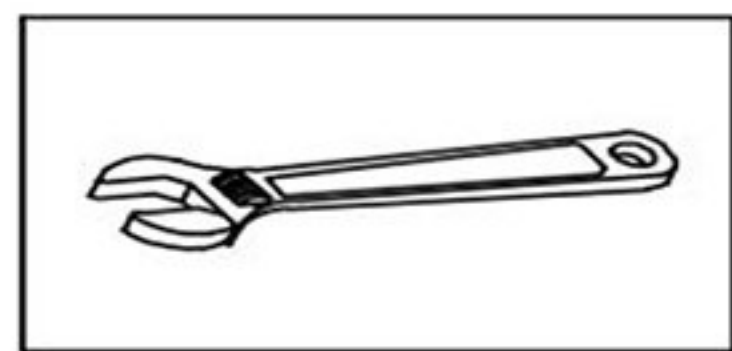

Adjustable Wrench

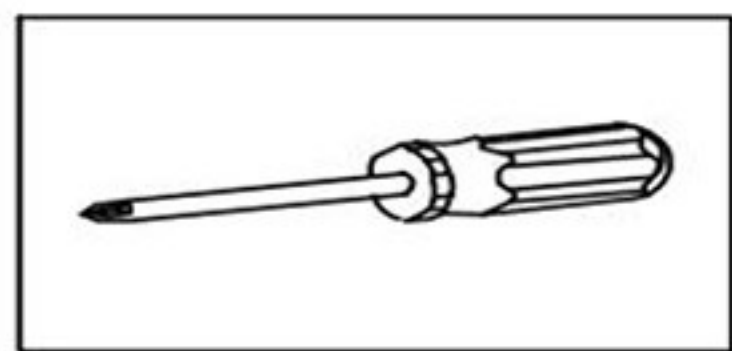


Philips Screwdriver

## Before Installation


1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
6. Do not use bulbs with wattage greater than specified on this fixture.

## Parts List

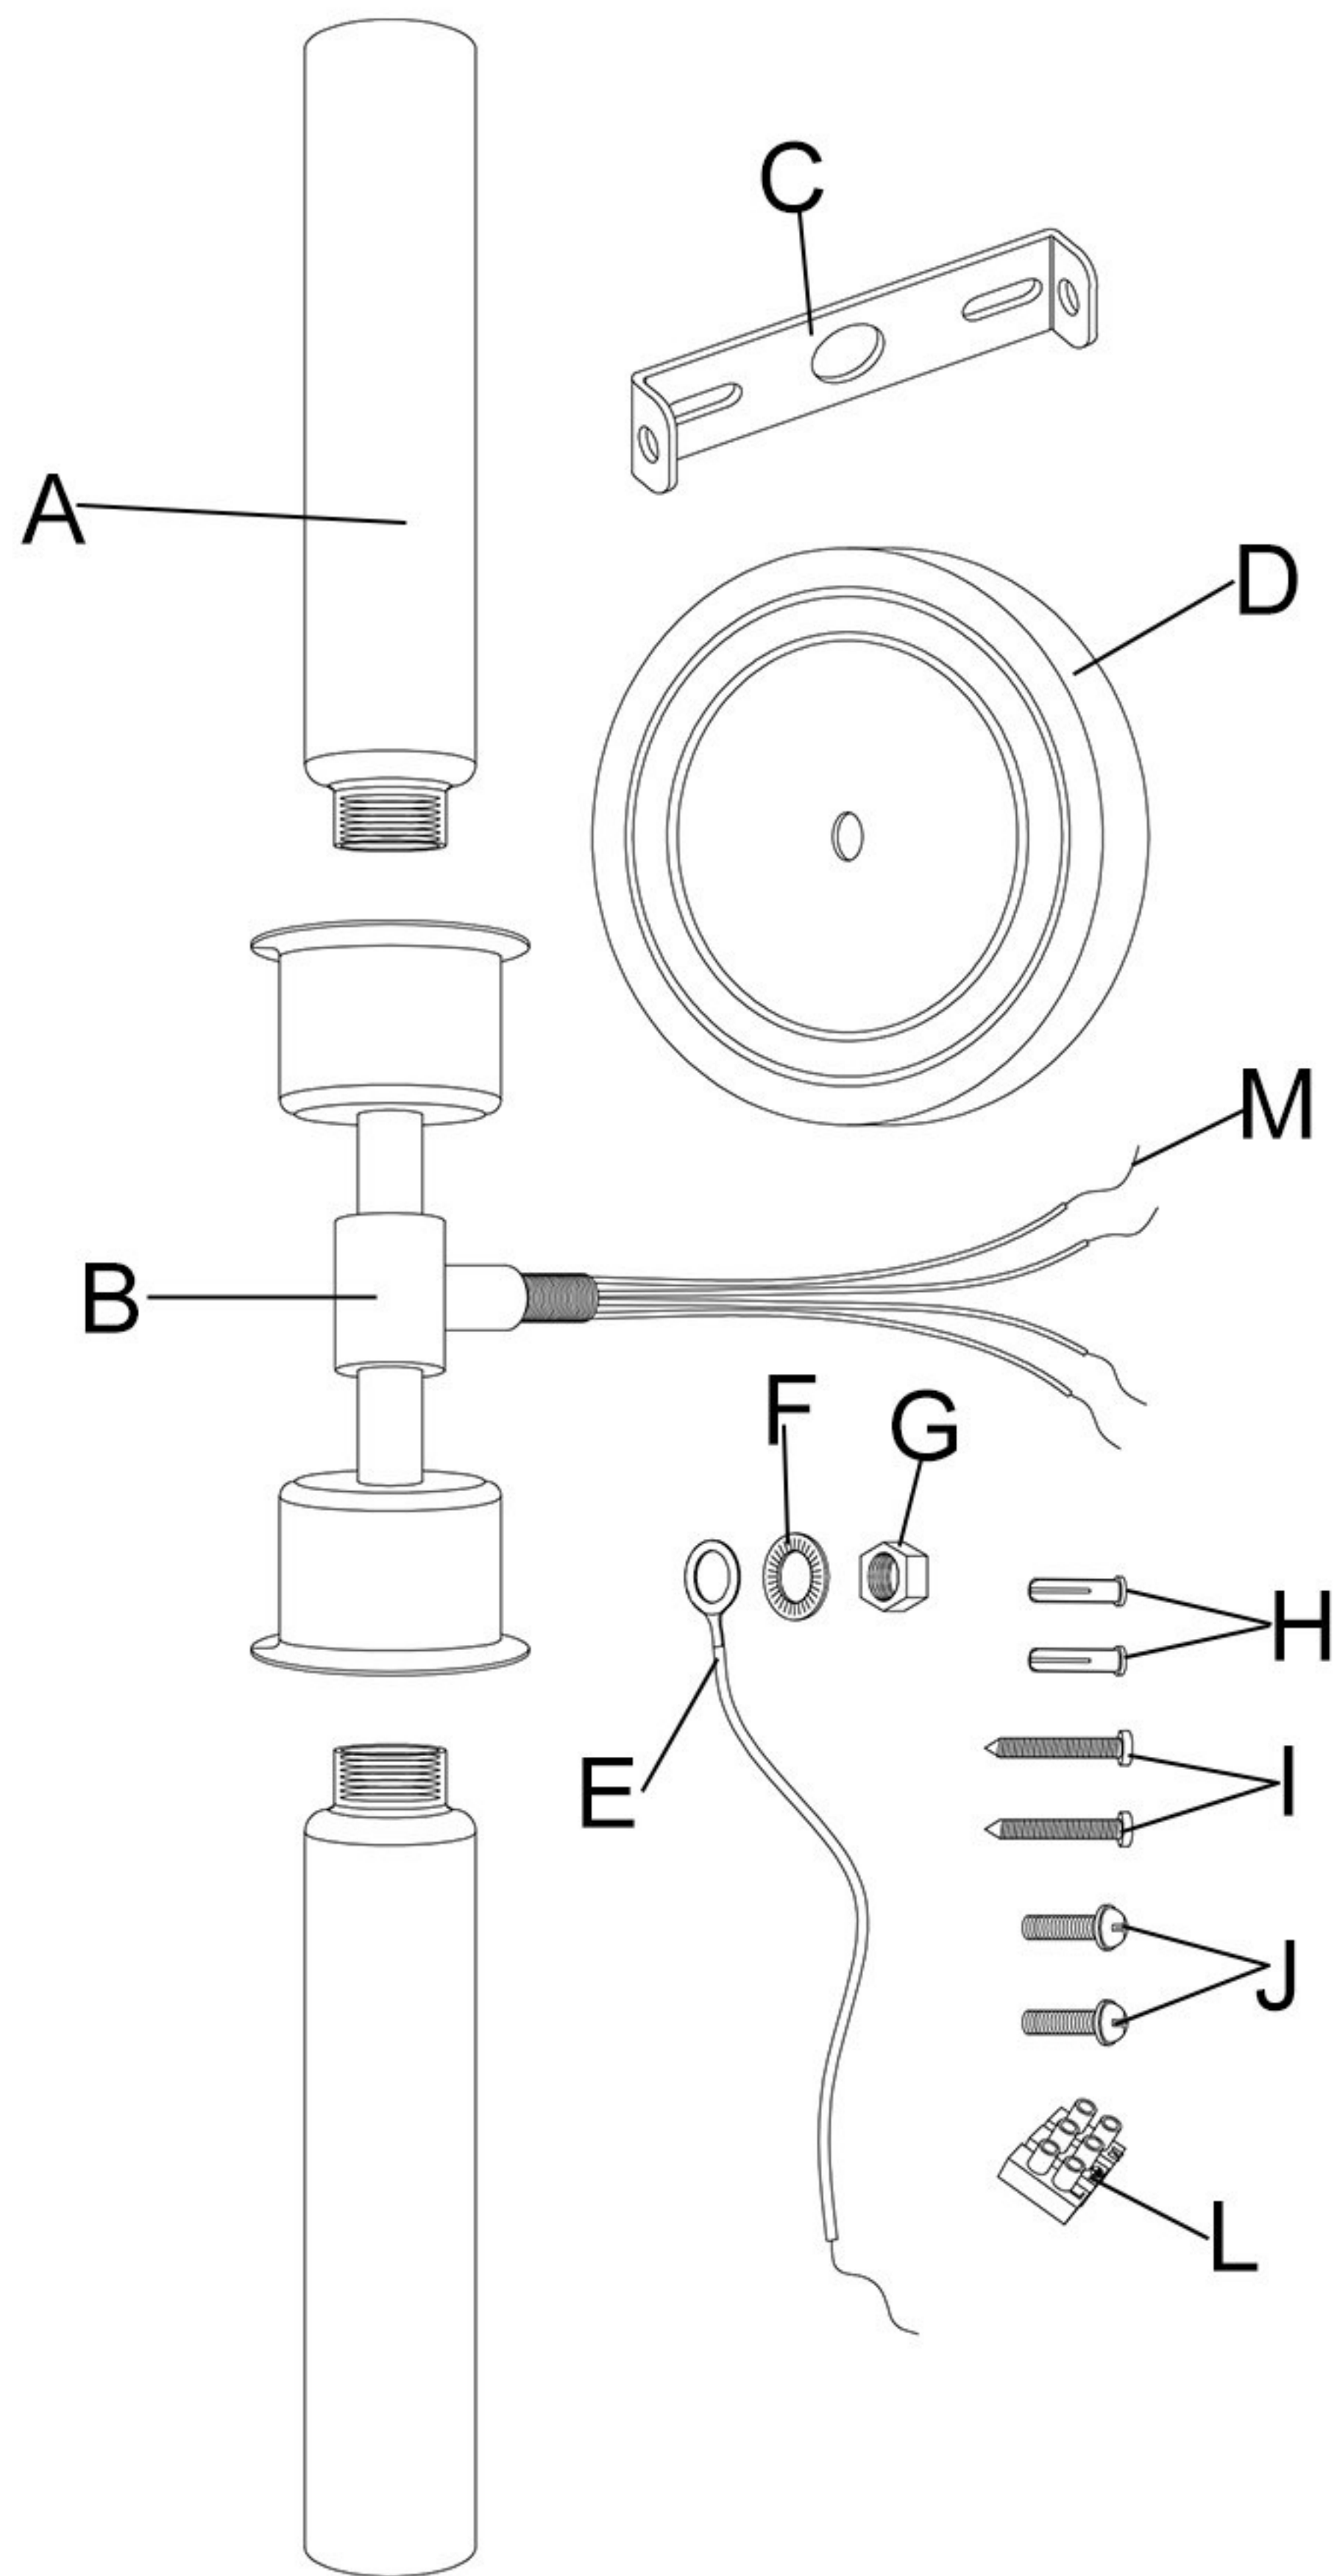


Part	Name	Quantity
A	light	2
B	light fixture	1
C	mounting plate	1
D	decor cover	1
E	earth wire	1
F	spring washer	1
G	screw nut	1
H	expension screw	2
I	screw	2
J	grub screw	2
L	wire connector	1
M	wire	4


## Installation Guide

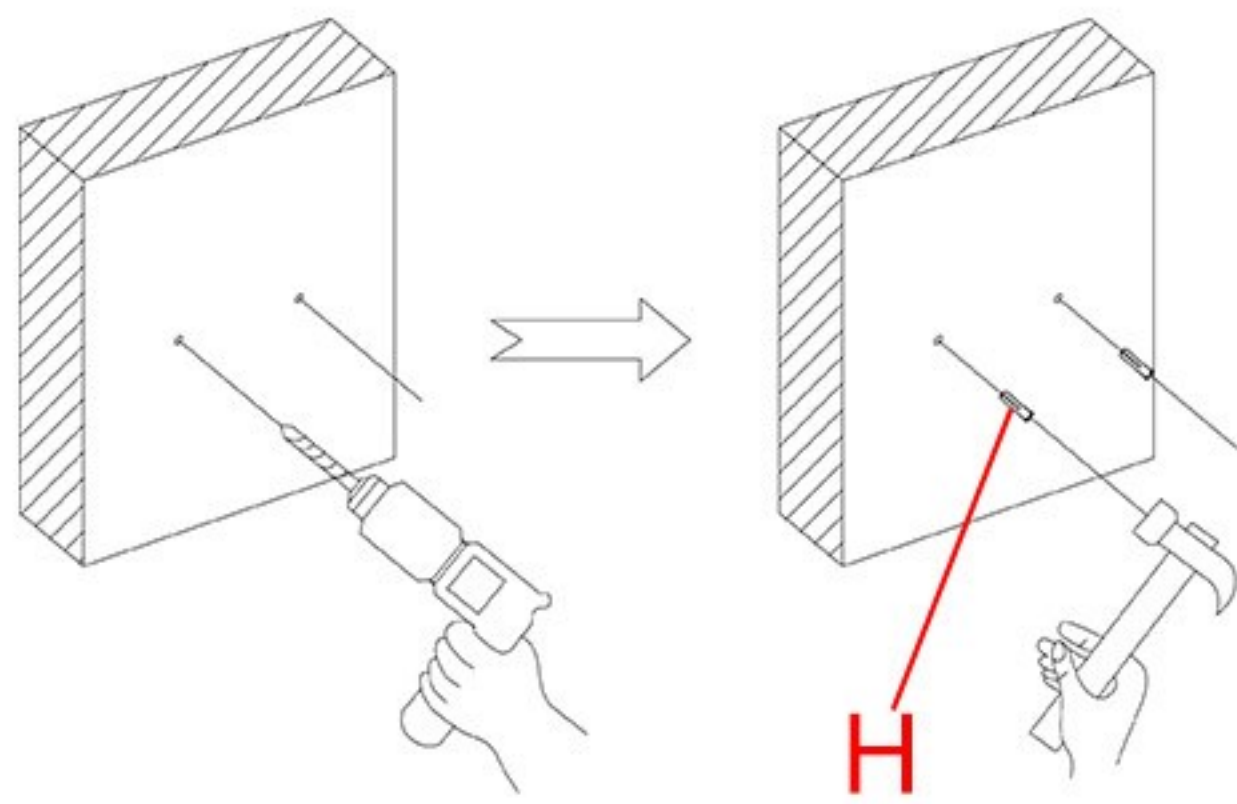


1. Put the mounting plate on the wall and mark holes to drill. Insert the expension screws (H) into the holes with the hammer(not included).

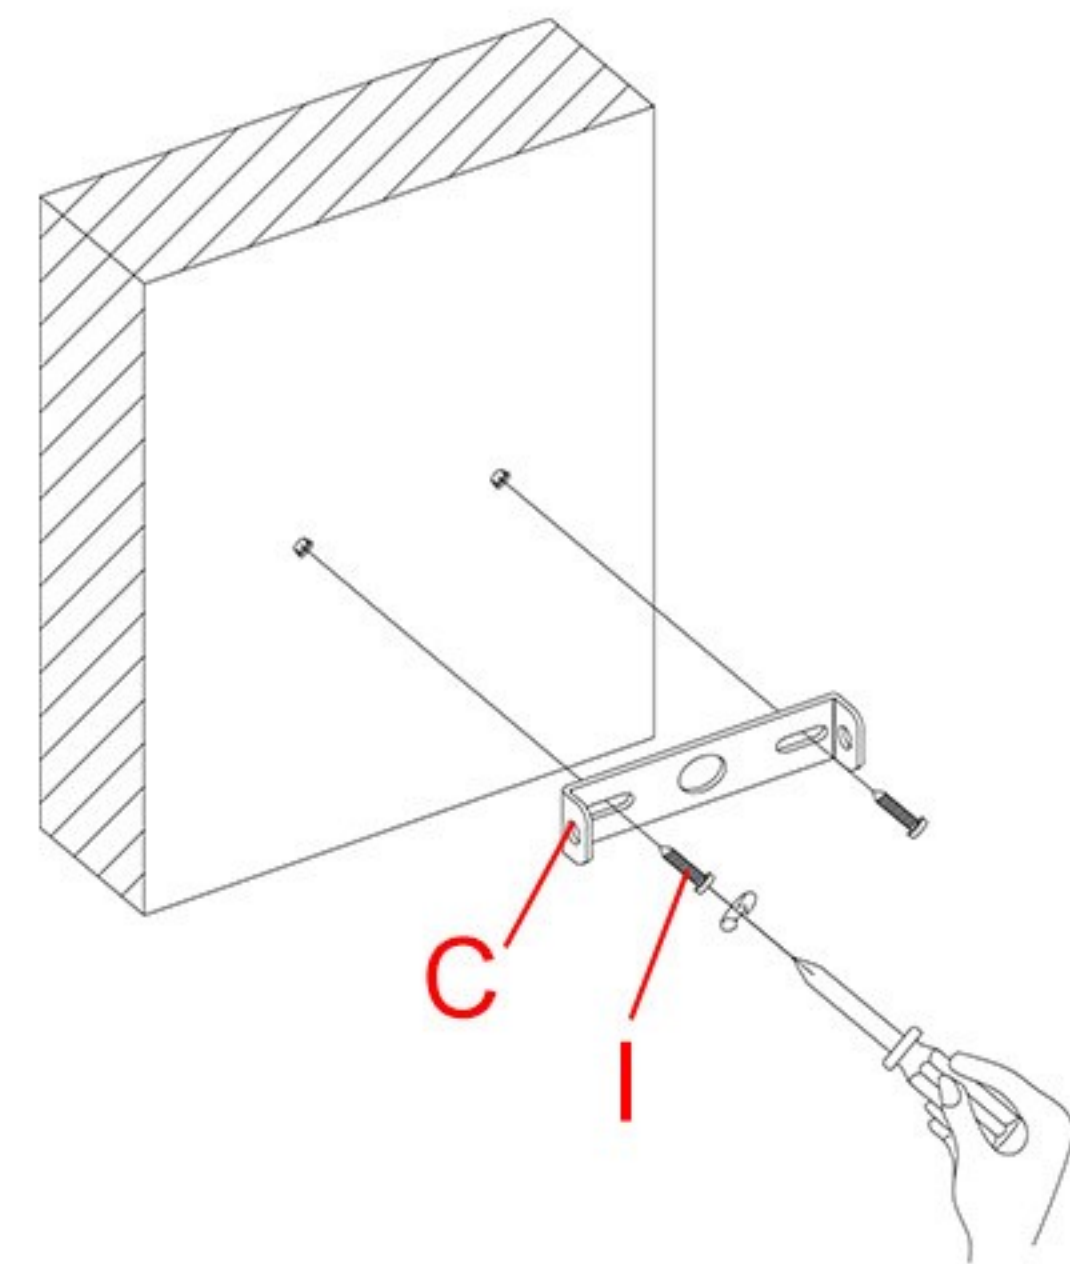


2. Fix the mounting plate (C) to the wall with screws (I).

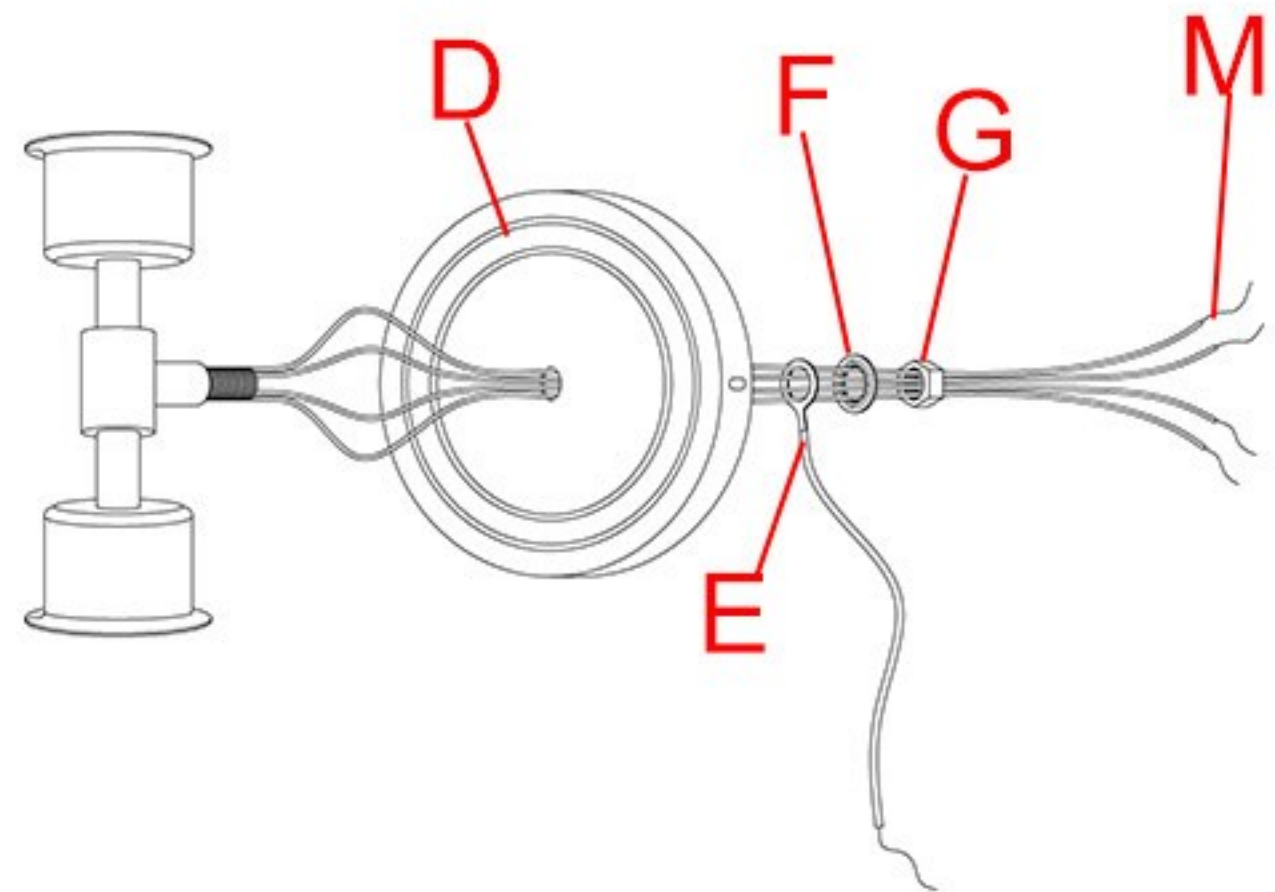

3. Let the wires (M) go through the decor cover (D), earth wire (E), spring washer (F) and screw nut (G) in turn. Screw up the nut (G).

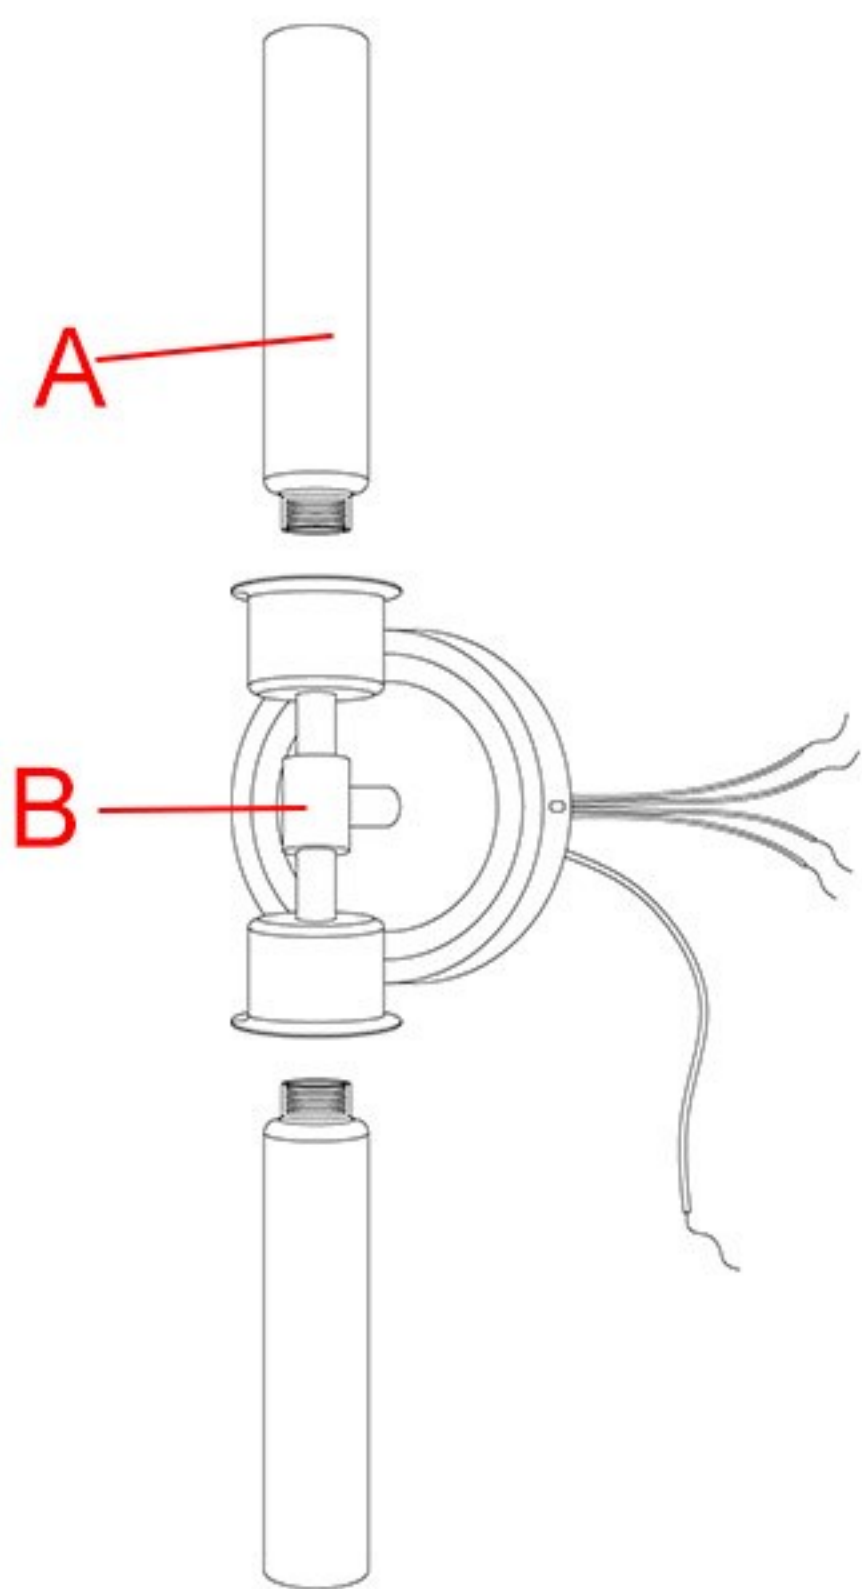

4. Screw up the lights (A) into the light fixture (B).

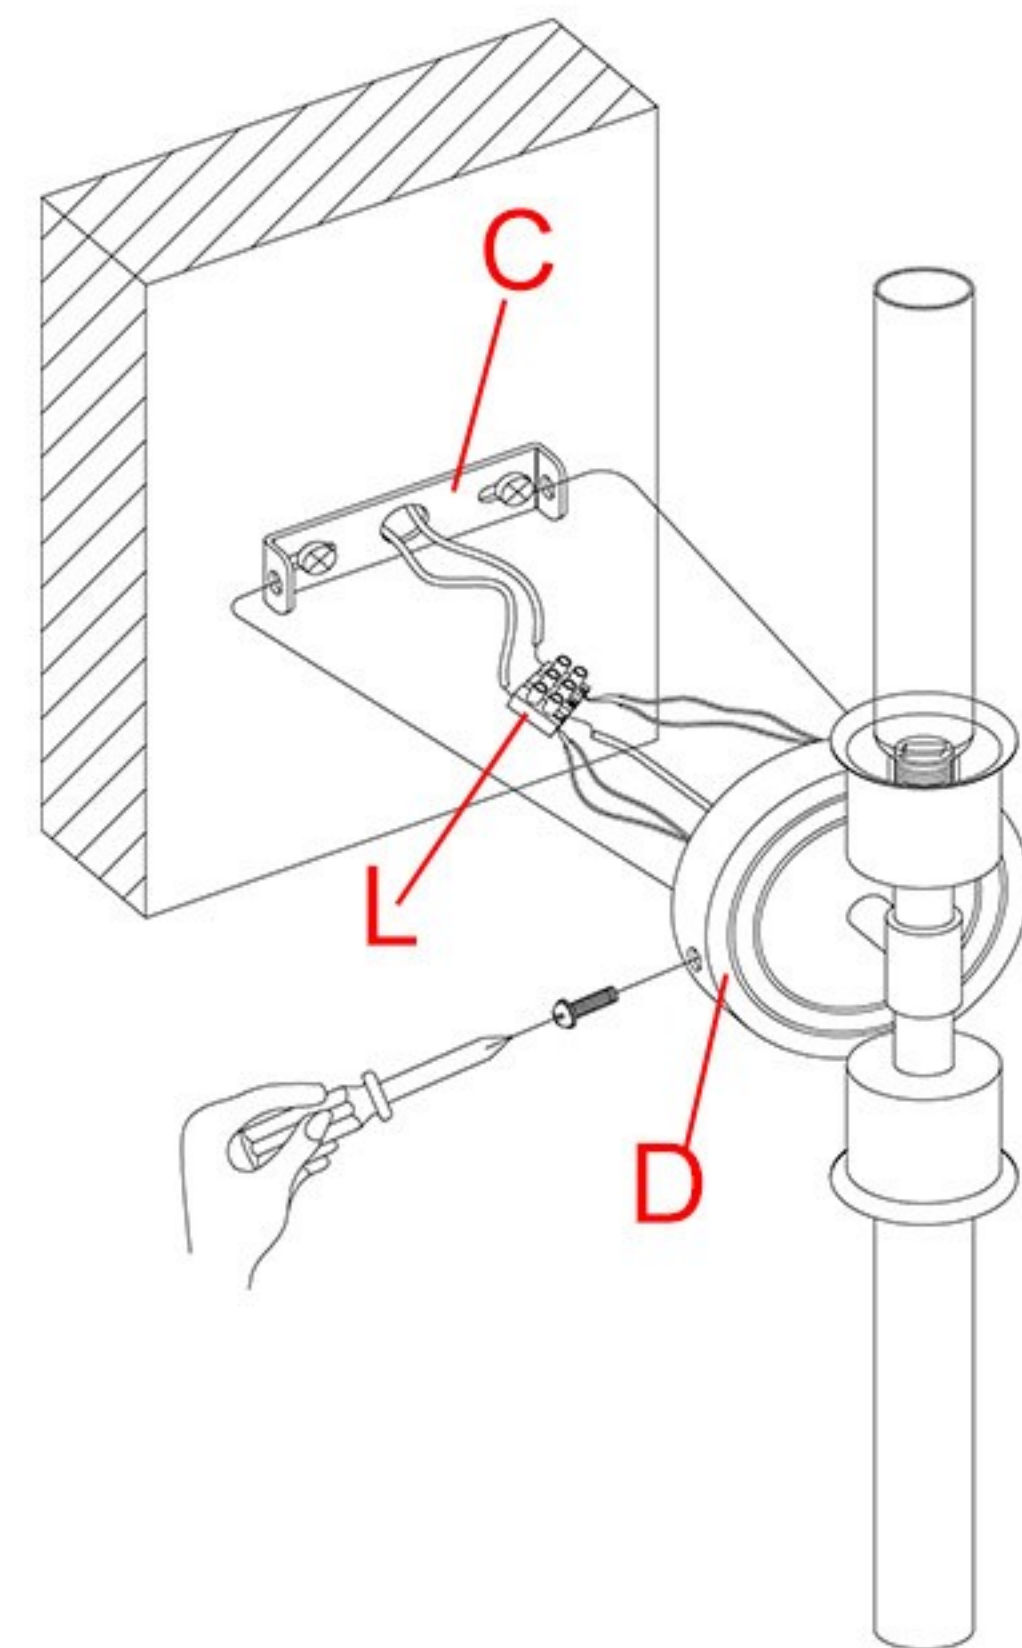

5. Connect the blue wires with the wire connector (L) and then the null wires. Connect the brown wires with the wire connector (L) and the live wires. Fix the decor cover (D) to the sides of the mounting plate (C).

## Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	1. Fixture may be wired incorrectly. 2. Worn or broken bulb. 3. Lamp socket or LED transformer (if applicable) may go bad.	1. Check wiring. 2. Replace bulb. 3. Replace lamp socket or LED transformer (if applicable).
Light bulb flickers.	1. Switch Contacts are bad. 2. Wire connections are loose. 3. Light bulb socket may go bad.	1. Replace the switch. 2. Check wire connections. 3. Replace the socket.