
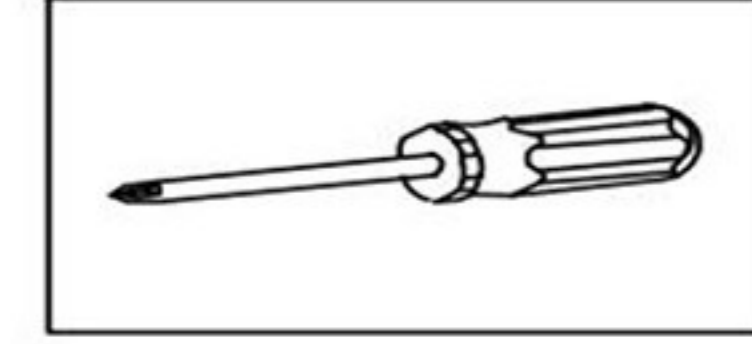


# Wall Lamp Installation

## Tools Required:

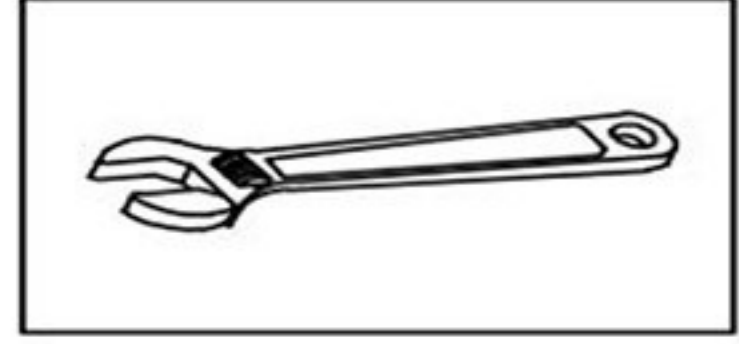


Adjustable Wrench    Philips Screwdriver

## Before Installation


1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
6. Do not use bulbs with wattage greater than specified on this fixture.

## Parts List

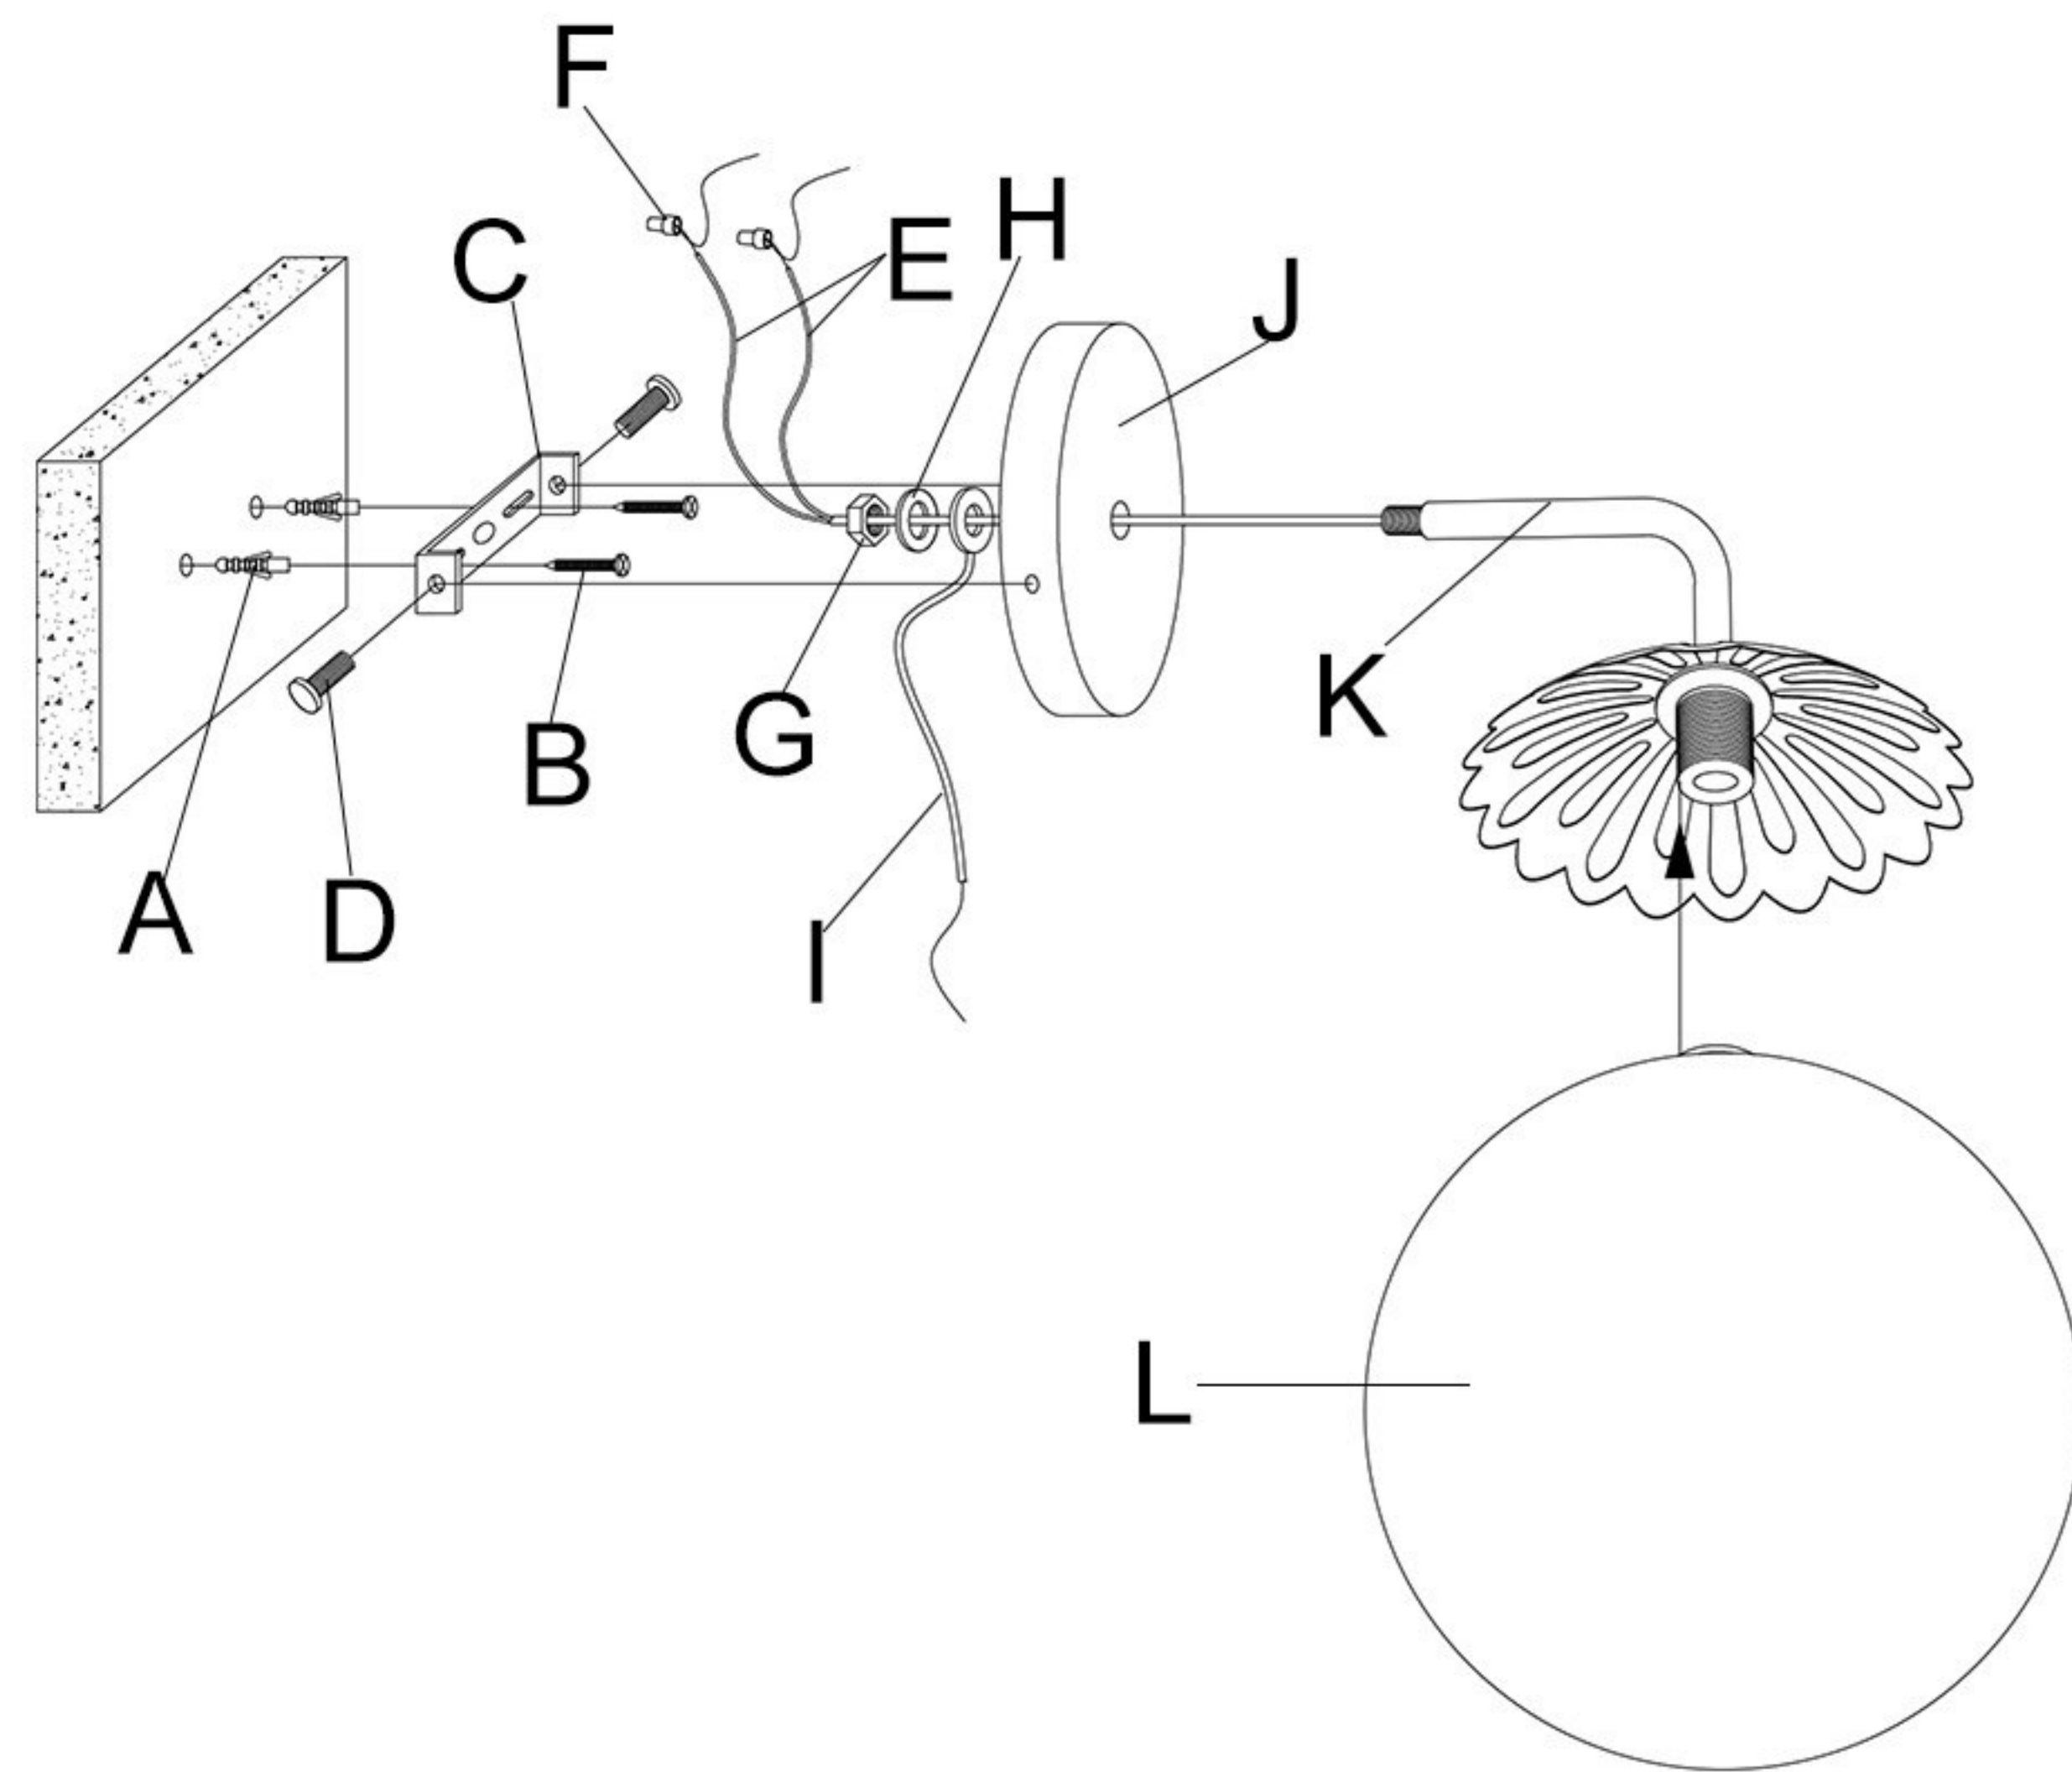


Part	Name	Quantity
A	expansion bolt	2
B	expansion screw	2
C	mounting strap	1
D	screw	2
E	live/null wire	2
F	wire connector	2
G	screw nut	1
H	metal washer	1
I	ground wire	1
J	canopy	1
K	lampholder	1
L	light shade	1


## Installation Guide

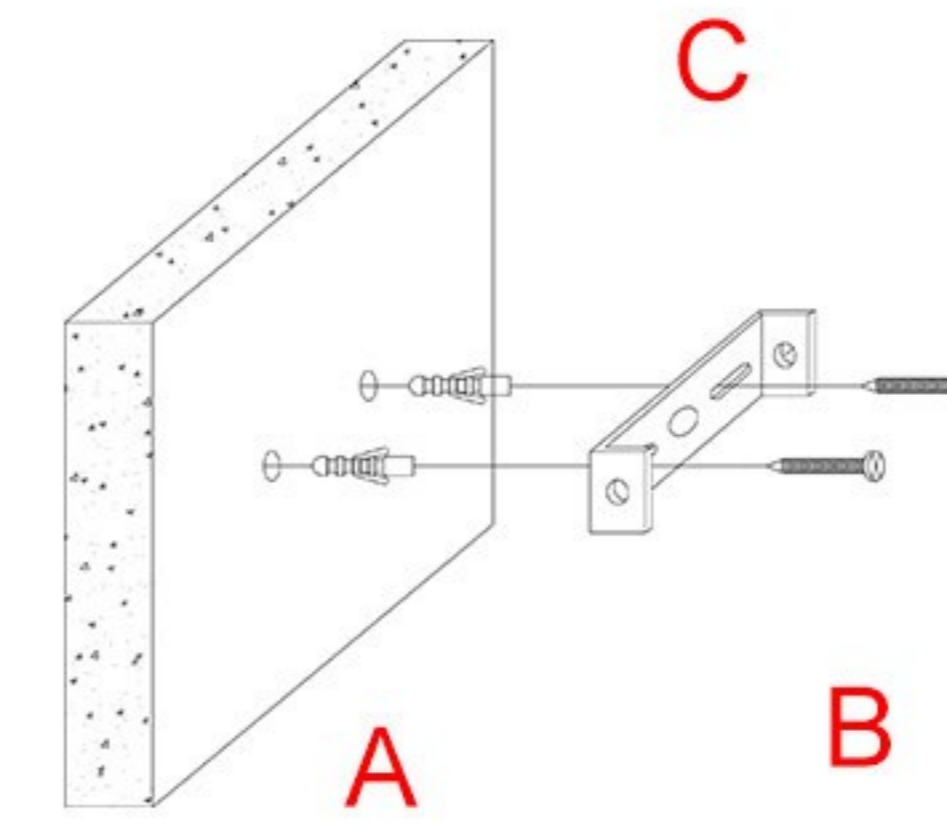


1. Shut the power off. Put the mounting strap (C) to the ceiling and mark holes to drill as shown. Suit the expansion bolts (A) into the holes and fix the mounting strap to the ceiling with expansion screws (B).

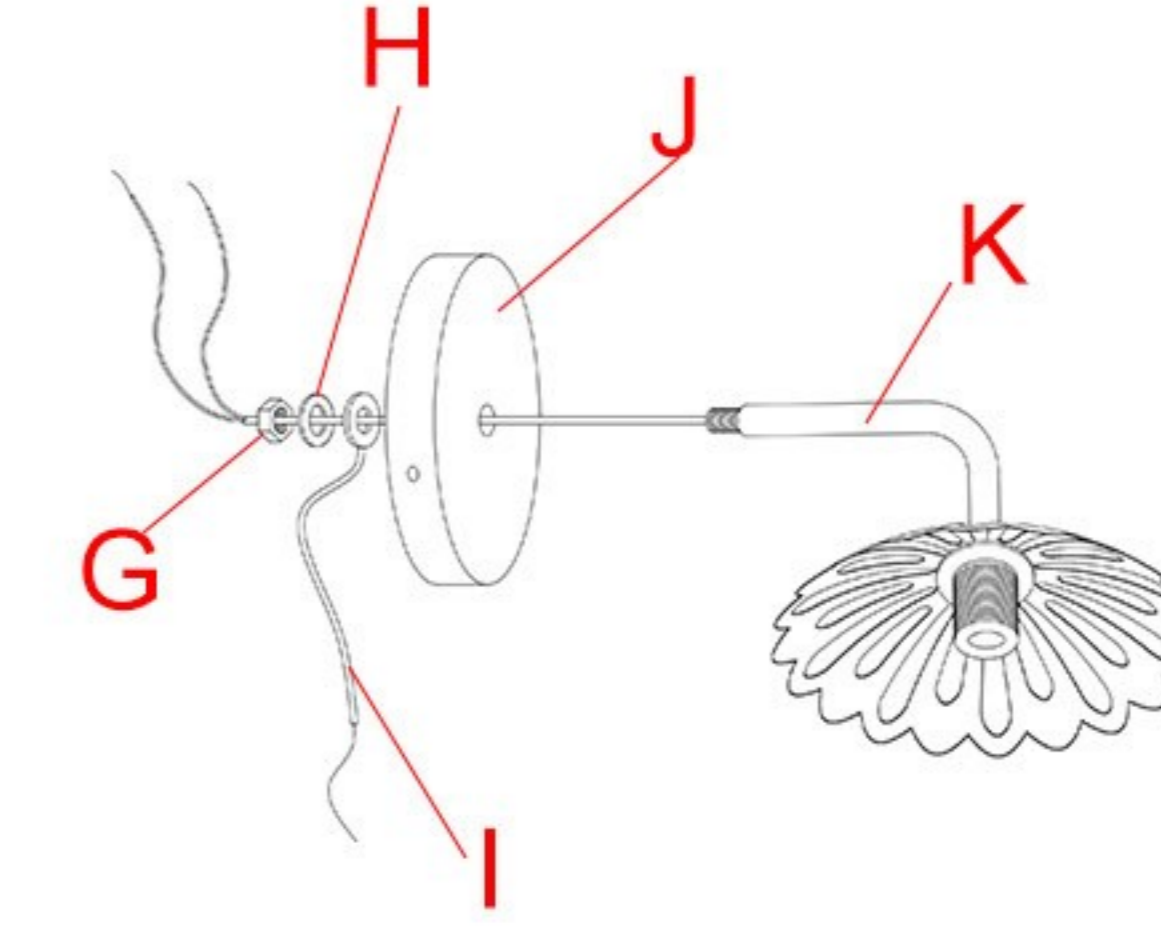


2. Feed the wire from the lampholder (K) through the canopy (J) and screw the holder to the canopy. Install the ground wire (I), metal washer (H), and screw nut (G) to the wire inside the canopy and tighten the nut.

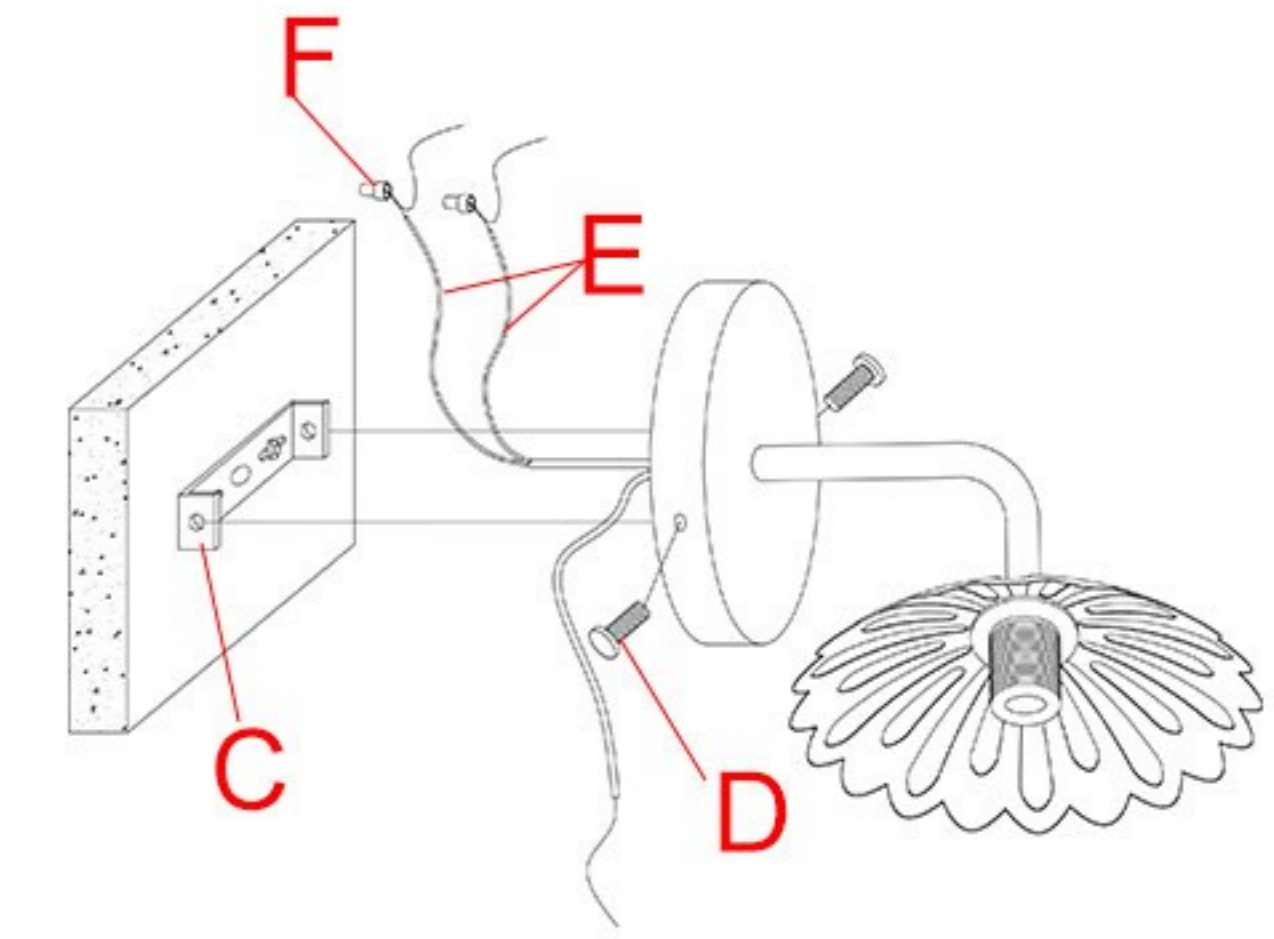

3. Connect the live and null wires (E) to yours and cover them with the wire connectors (F). Insert the screws (D) into the mounting strap (C) at two ends and tighten the screws to fix the canopy.

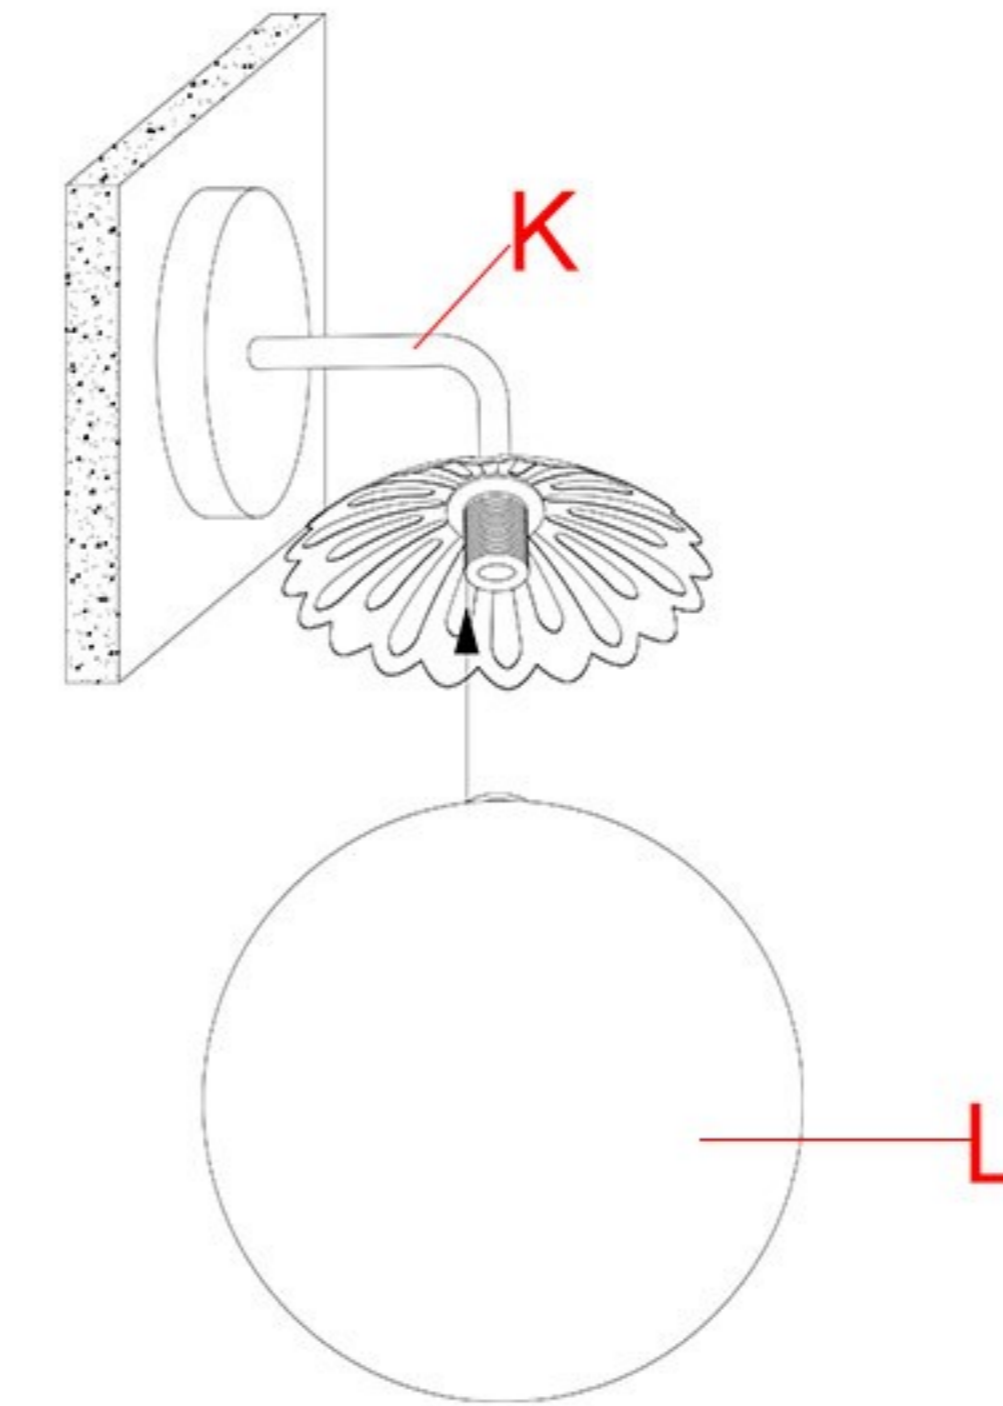

4. Screw up the light shade (L) to the light holder (K).

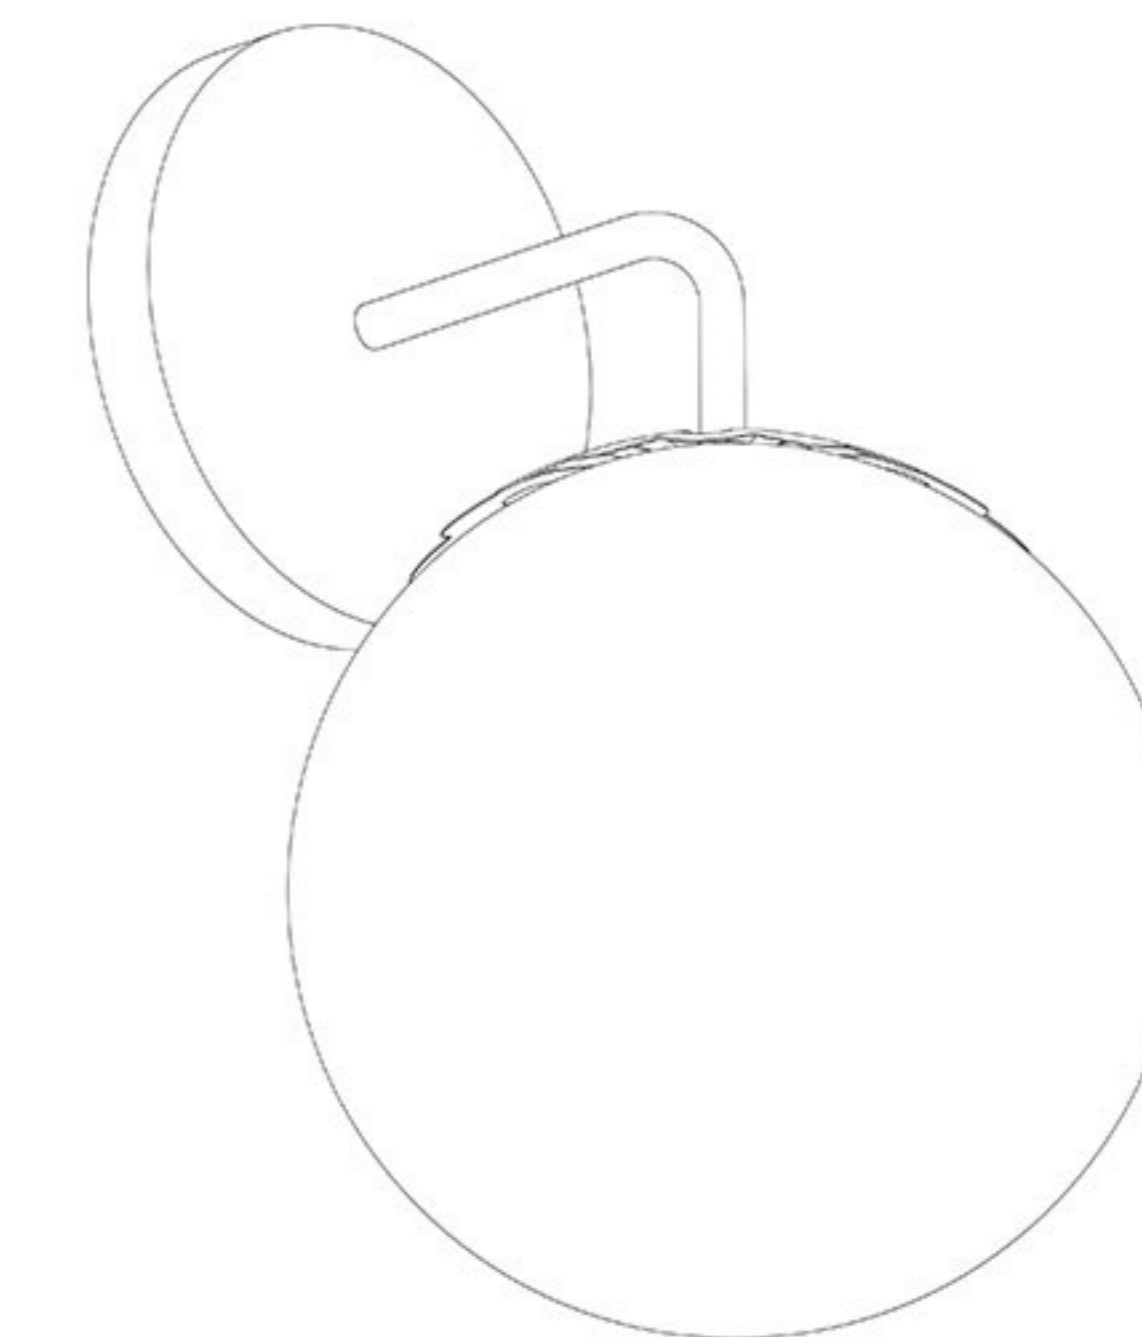

5. Turn on the power and test.

## Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	<ol style="list-style-type: none"> <li>1. Fixture may be wired incorrectly.</li> <li>2. Worn or broken bulb.</li> <li>3. Lamp socket or LED transformer (if applicable) may go bad.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check wiring.</li> <li>2. Replace bulb.</li> <li>3. Replace lamp socket or LED transformer (if applicable).</li> </ol>
Light bulb flickers.	<ol style="list-style-type: none"> <li>1. Switch Contacts are bad.</li> <li>2. Wire connections are loose.</li> <li>3. Light bulb socket may go bad.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the switch.</li> <li>2. Check wire connections.</li> <li>3. Replace the socket.</li> </ol>