


Desk Installation

INSTALLATION MANUAL Tools You Will Need:

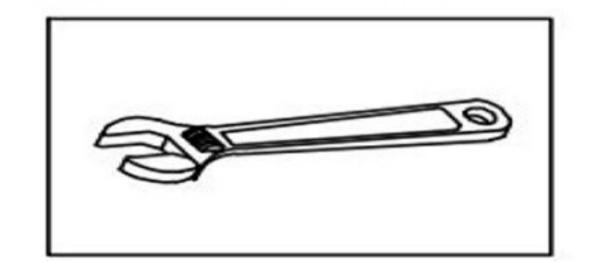

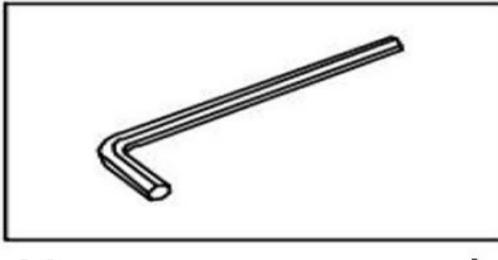

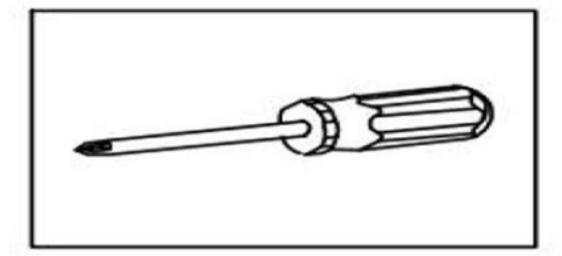

Adjustabie Wrench

Hexagon wrench


Philips Screwdriver

Before the Installation

- 1. Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us.
- 2. Assemble this item on a soft surface, such as carpet to protect the finish.
- 3. Proper assembly of this item requires 2 people.
- 4. Periodically check to ensure that all connections are tight.
- 7. It is recommended that installation of the product be done by a qualified licensed plumber.


Care and Cleaning


- 1. To protect the finish, avoid use chemicals and household cleaners.
- 2. All hot serving dishes should be placed on a pad.
- 3. Any liquid spilled onto the top should be cleaned up immediately with a damp cloth.

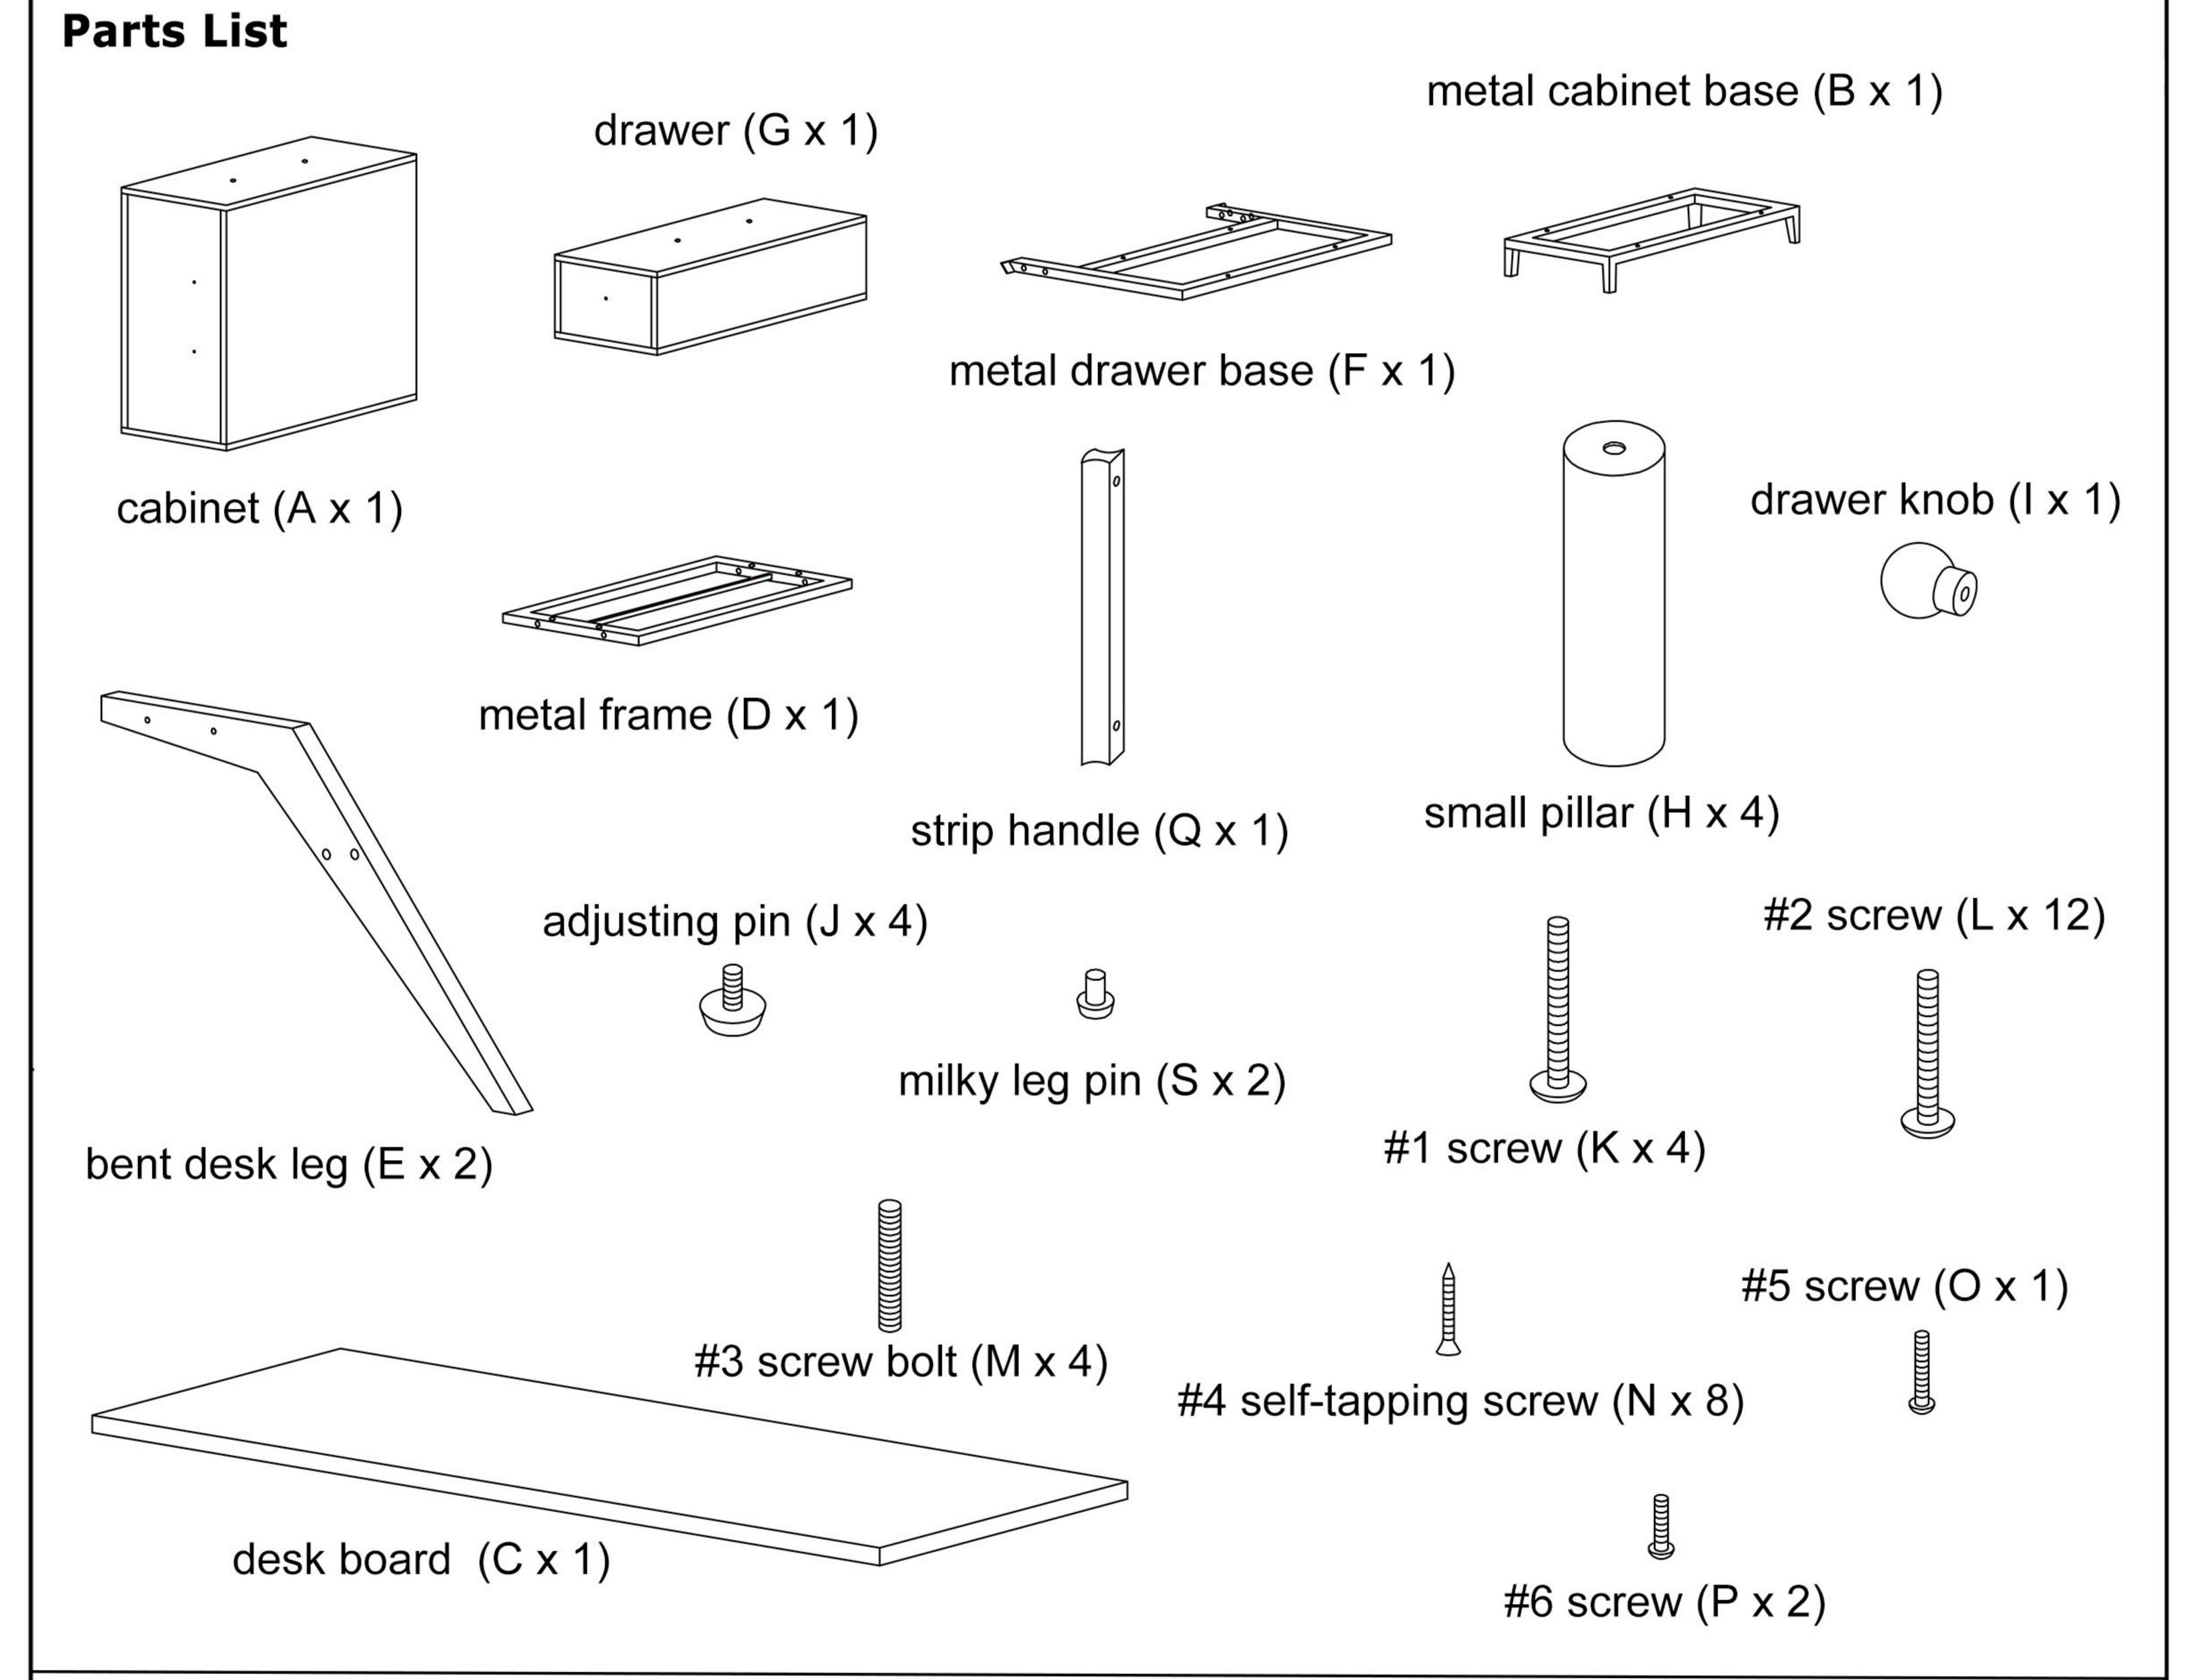


Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.


Installation Guide

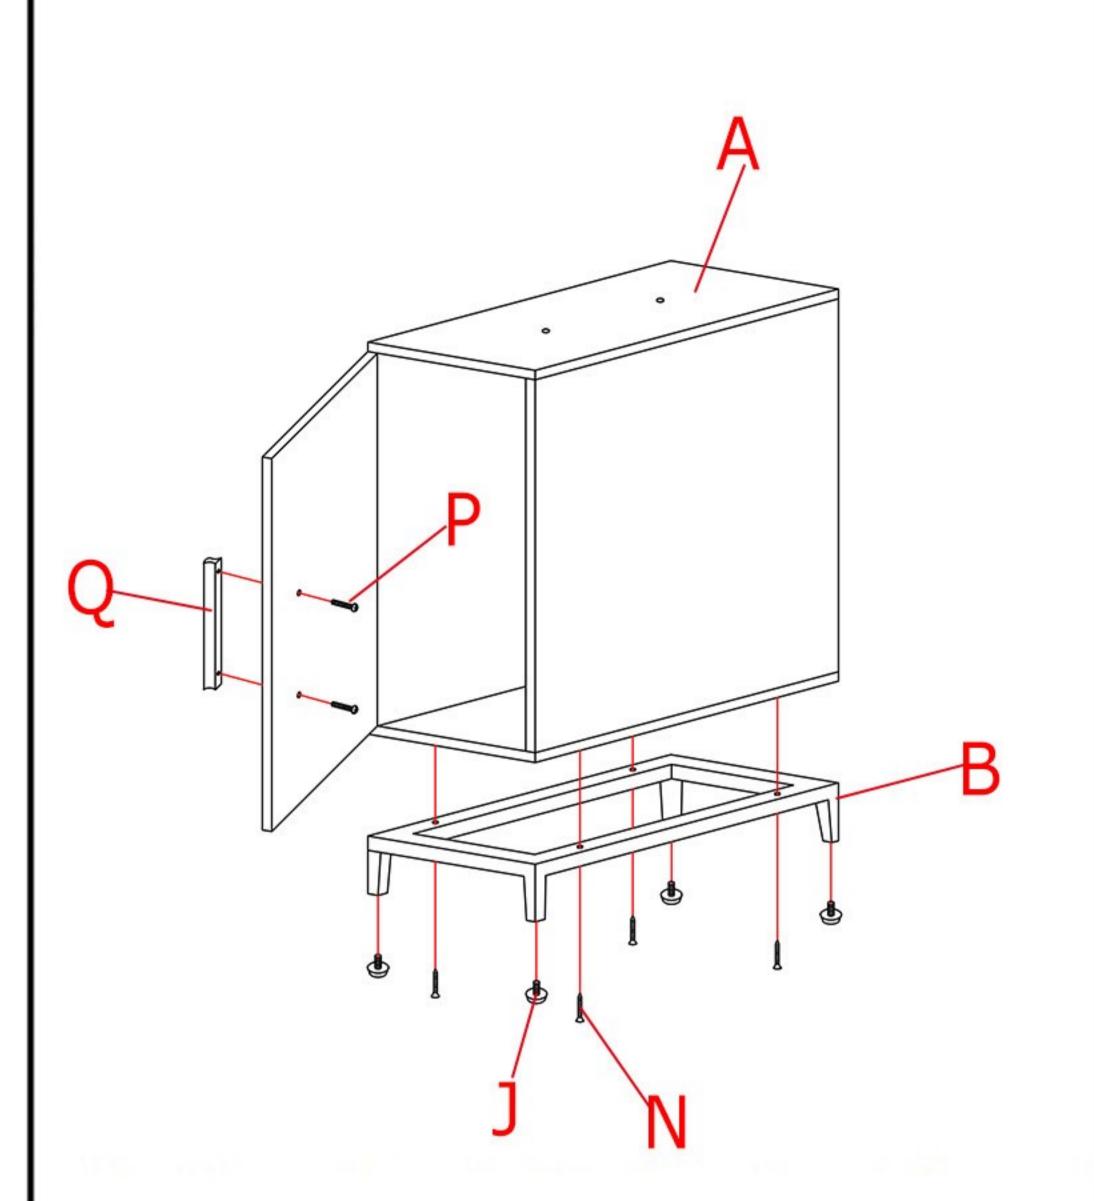


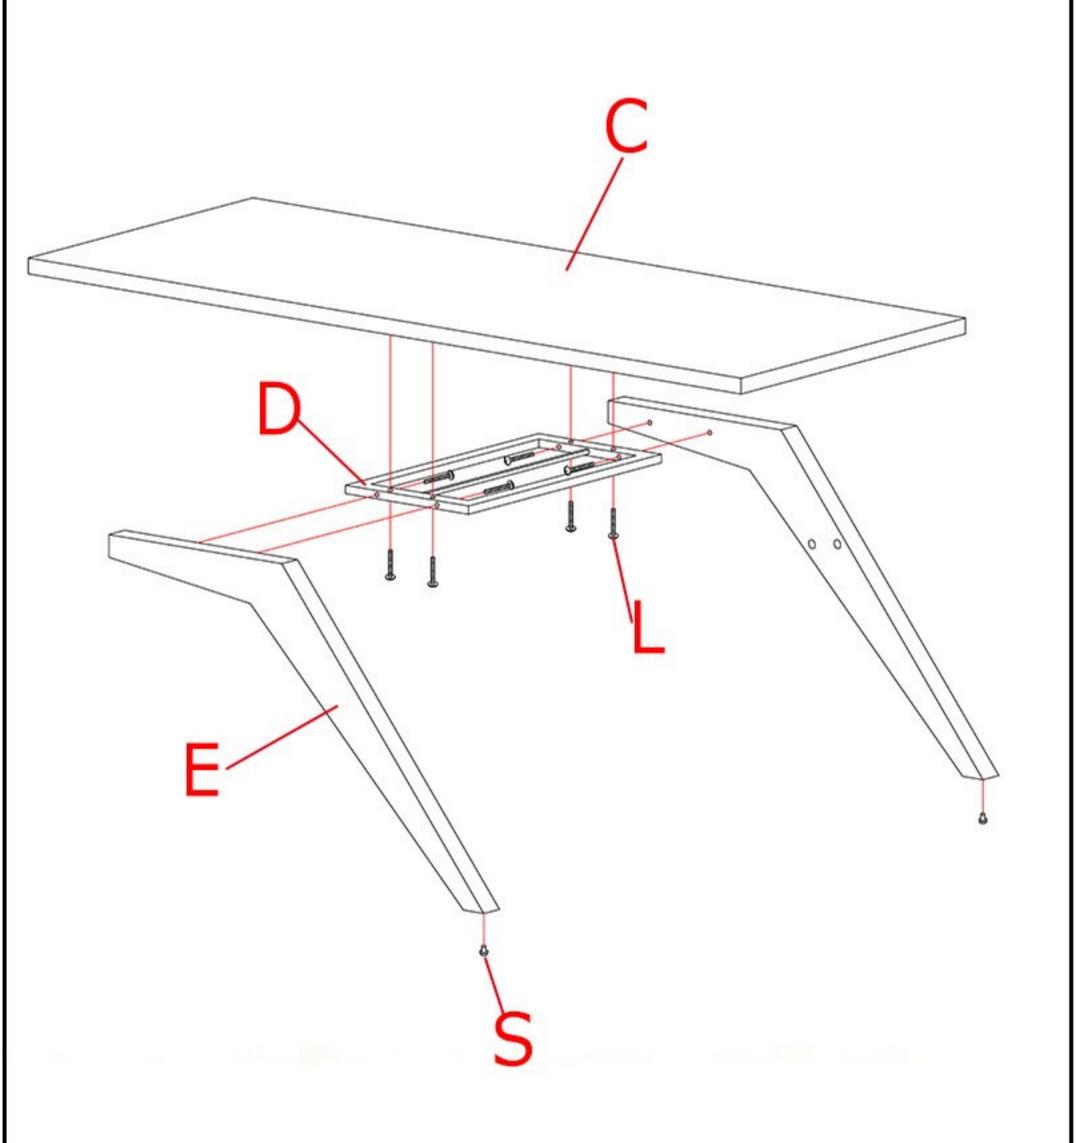


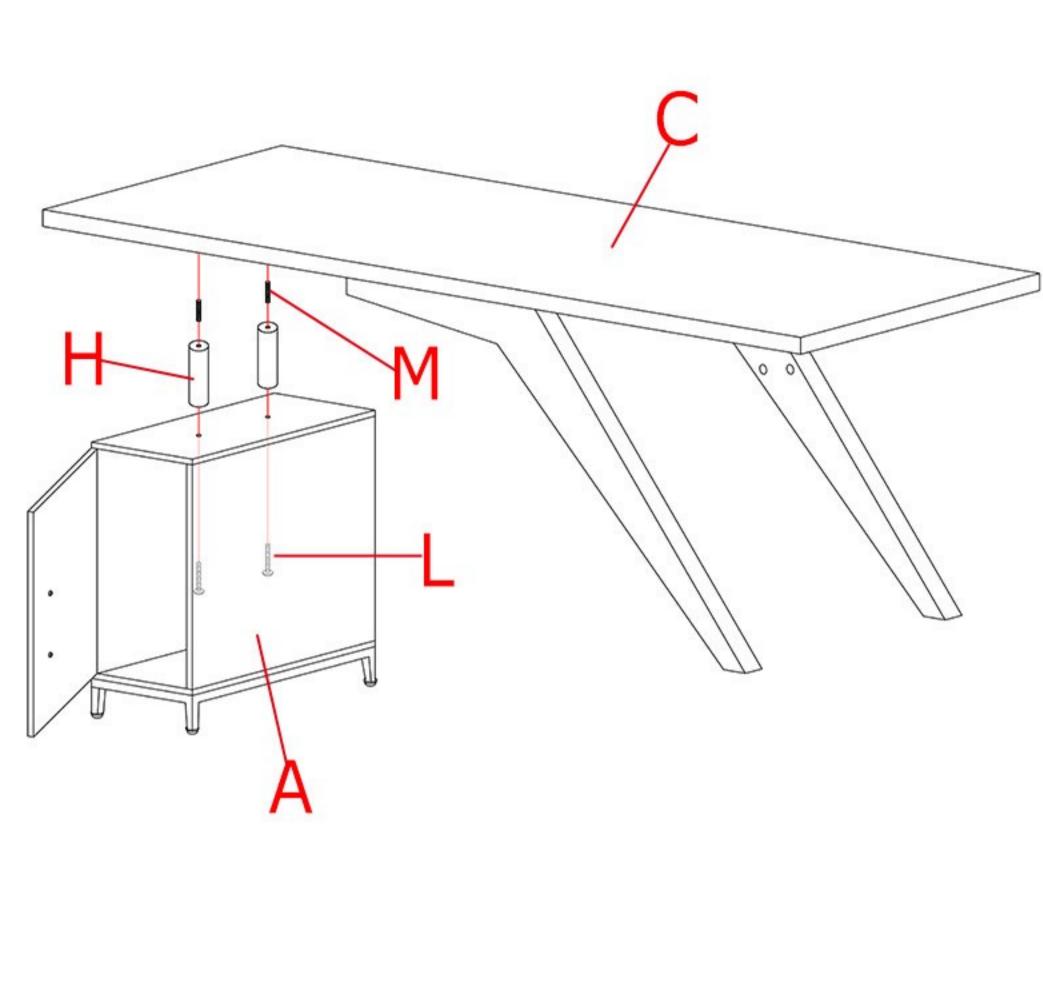

- to the cabinet (A) door by tightening the #6 screws (P). Put the cabinet upside down and fix the metal cabinet base (B) with 4 #4 self-tapping screws (N). Screw the adjusting pins (J) into each foot of the base. Stand the cabinet.
- 1. Align the holes and fix the strip handle (Q) 2. Align the holes on the bent desk legs (E) and metal frame (D), and fix them with #2 screws (L) (as shown). Put the desk board (C) upside down and align the holes of the whole frame to the middle holes on the desk board. Tighten them together with #2 screws (L) and squeeze the milky leg pins (S) into the bottoms of the bent desk legs (E).
- 3. Screw one end of the #3 screw bolts (M) into the small pillars (H) and screw the other into the desk board (C) to the left as shown. Fasten the small pillars on the cabinet (A) by tightening them with #2 screws (L).

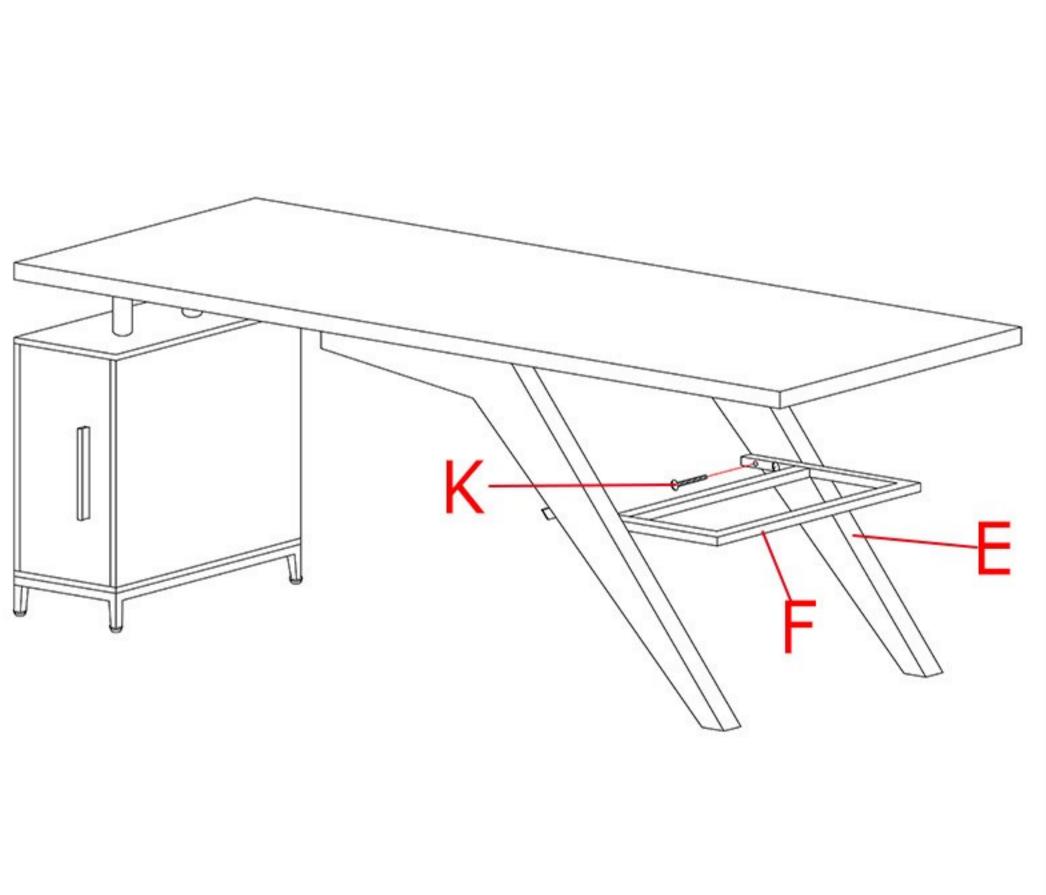

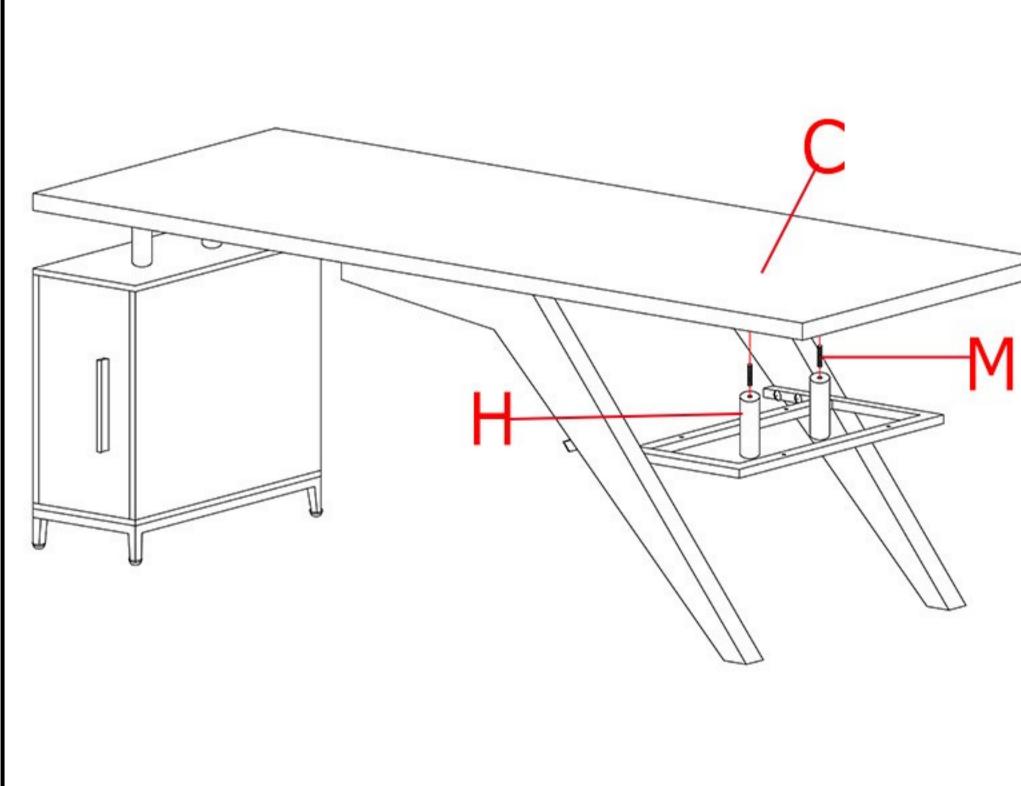

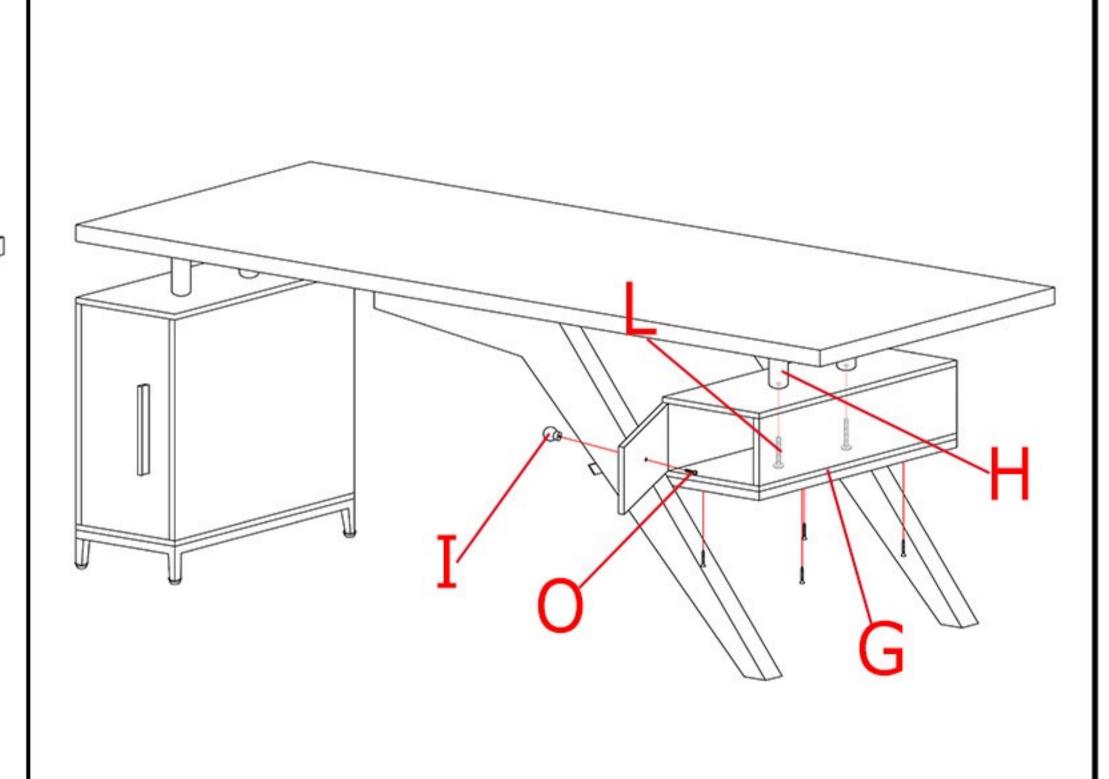

- 4. Fix the metal drawer base (F) to the bent desk leg (E) with 4 #1 screws (K) as shown.
 - 5. Screw one end of the #3 screw bolts (M) into the small pillars (H) and screw the other into the desk board (C) to the right.
- 6. Fasten the small pillars (H) on the drawer (G) by tightening them with #2 screws (L). Let the #5 screw (O) go through the hole in the drawer and tighten the #5 screw to fix the drawer knob (I).