Installation Instruction

Before You Begin

1. Shut off the main water supply.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. To avoid the faucet from jamming, DO flush the water pipe before installation.
4. After installation, make sure every joint is safely sealed (NO LEAKAGE).
5. Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left and cold water pipe connecting to the right.
6. It is recommended that installation of the product be done by a professional plumber.

Cleaning & Maintenance

To keep product clean and shiny follow the instruction below.
1. Flush with clean water and dry with soft cloth only.
2. Do not use any detergent, polisher, sane-cloth, or a scraper.
3. Do not use acid detergent.

Installation

1. set screw	2. handle	3. Allen key	4. bonnet nut
5. rubber washer	6. mounting nut	7. valve	8. spout body
9. O-ring	10. threaded pipe	11. rubber washer	12. mounting nut
13. diverter valve	14. rubber washer	15. shower hose	16. hand shower
17. rubber washer	18. hand shower holder	19. O-ring	20. rubber washer
21. mounting nut			

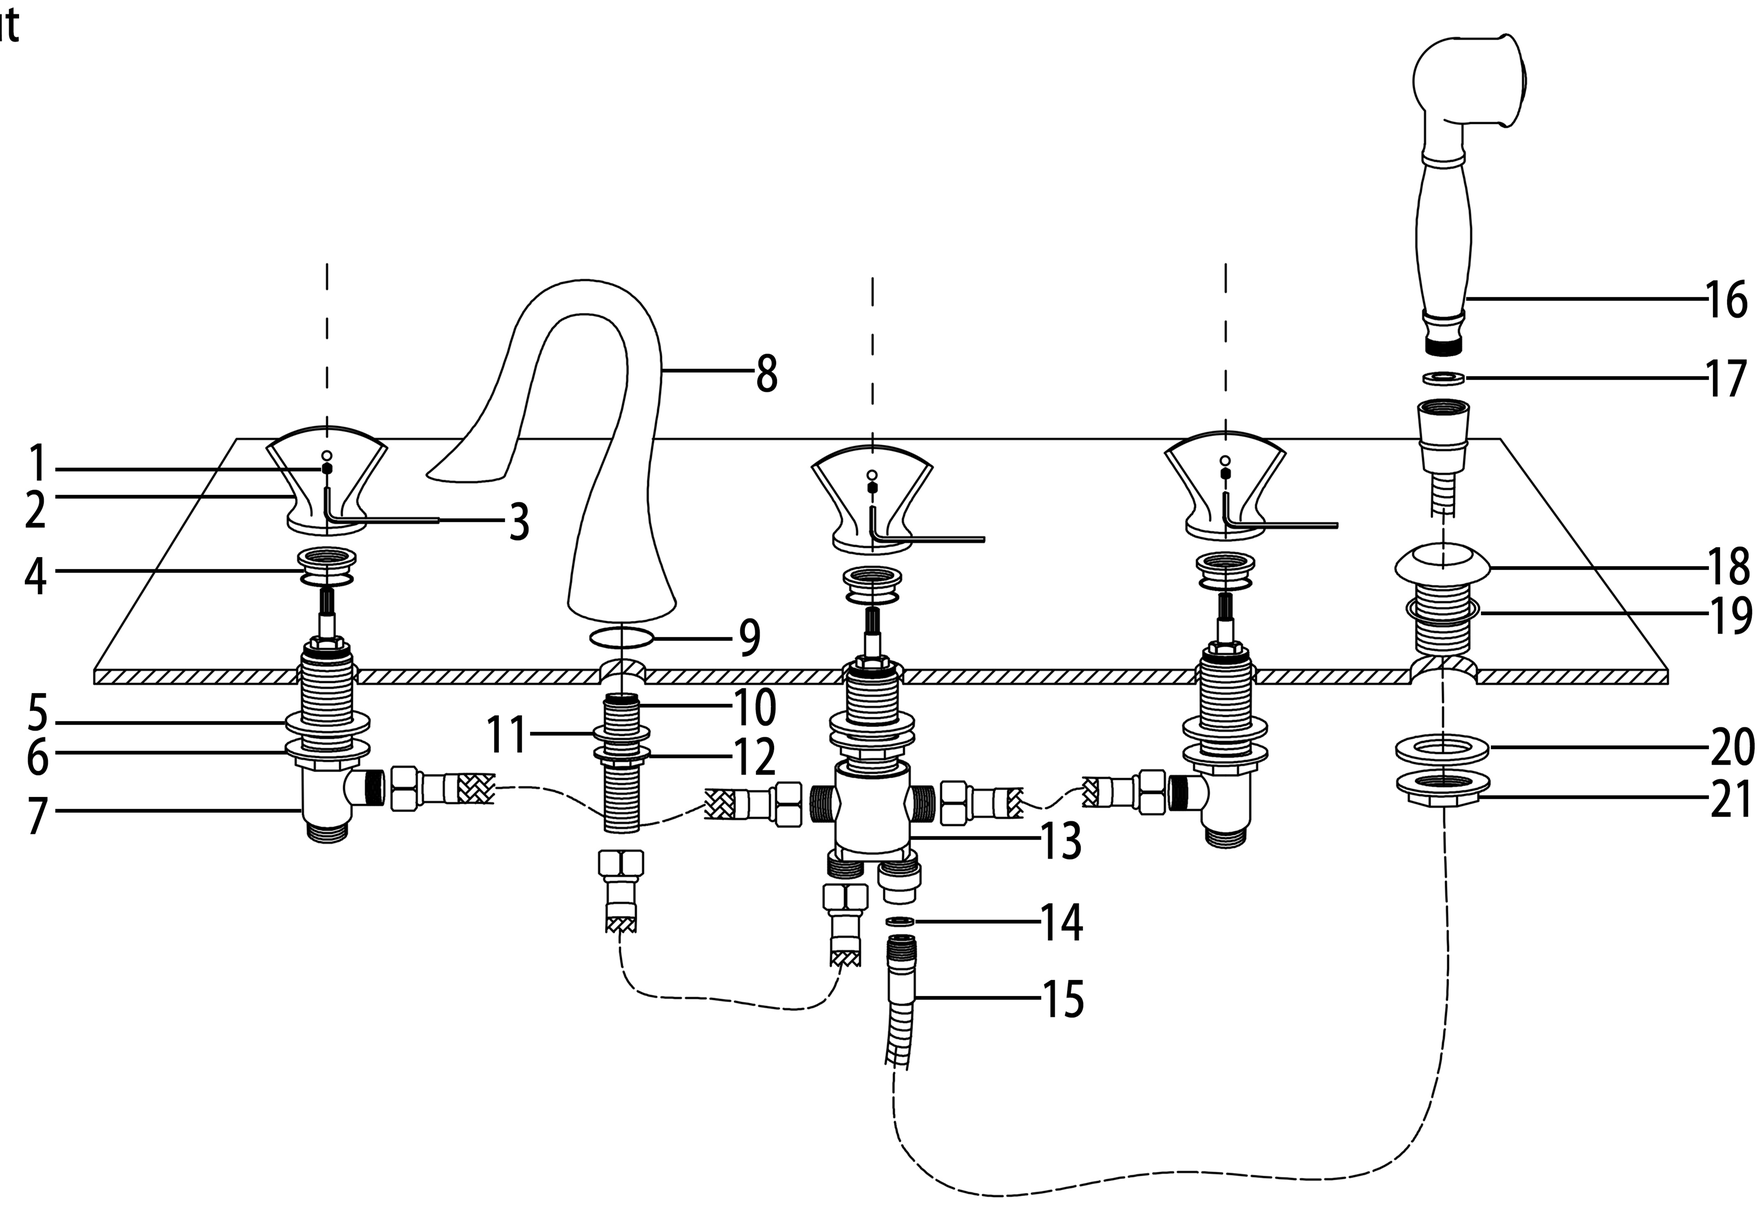

1. Screw threaded pipe into the spout body, and fit O-ring into the bottom groove of spout body.
2. Insert spout body into the specified drill hole on the counter top.
3. Install rubber washer to the threaded tail pipe of the spout body from underneath the counter top and then screw the mounting nut.
4. Install valve into specified drill hole from underneath the counter top. Screw bonnet nut into valve and fit the handle. Adjust the height and position of valve, then screw mounting nut to tighten valve underneath counter top securely.
5. Tighten set screw with Allen key to fix the handle.
6. Install the O-ring and insert the hand shower holder into the specified drill hole. Put on the rubber washer and screw in the mounting nut securely underneath the counter top.
7. Connect the shower hose to the hand shower and diverter valve. Make sure to add the rubber washer at both ends.
8. Connect the other waterlines according to the picture.
9. Connect waterlines (not included) onto the bottom of the hot & cold valve and then to main water supply lines.